

SU4 Tilting Offset Umbrella Adapter Plate Install Guide


Step 1 | Remove Aluminium Cover from the Free-Standing Base. Attach provided Rubber Feet.

If you have purchased the optional castor wheels, attach them now, instead of the rubber feet.

Step 2 | Fill the Free-Standing Base with **8** x 400mm x 400mm x 40~50mm pavers* in two layers and then replace the Aluminium Cover.

Step 3 | Bolt the Adapter Plate onto the Base Flange using the bolts provided with the Base.

Step 4 | Stand up the SU4 Umbrella and sit the Umbrella Spigot on the attached Adapter Plate and affix it with the supplied Spigot Bolts.

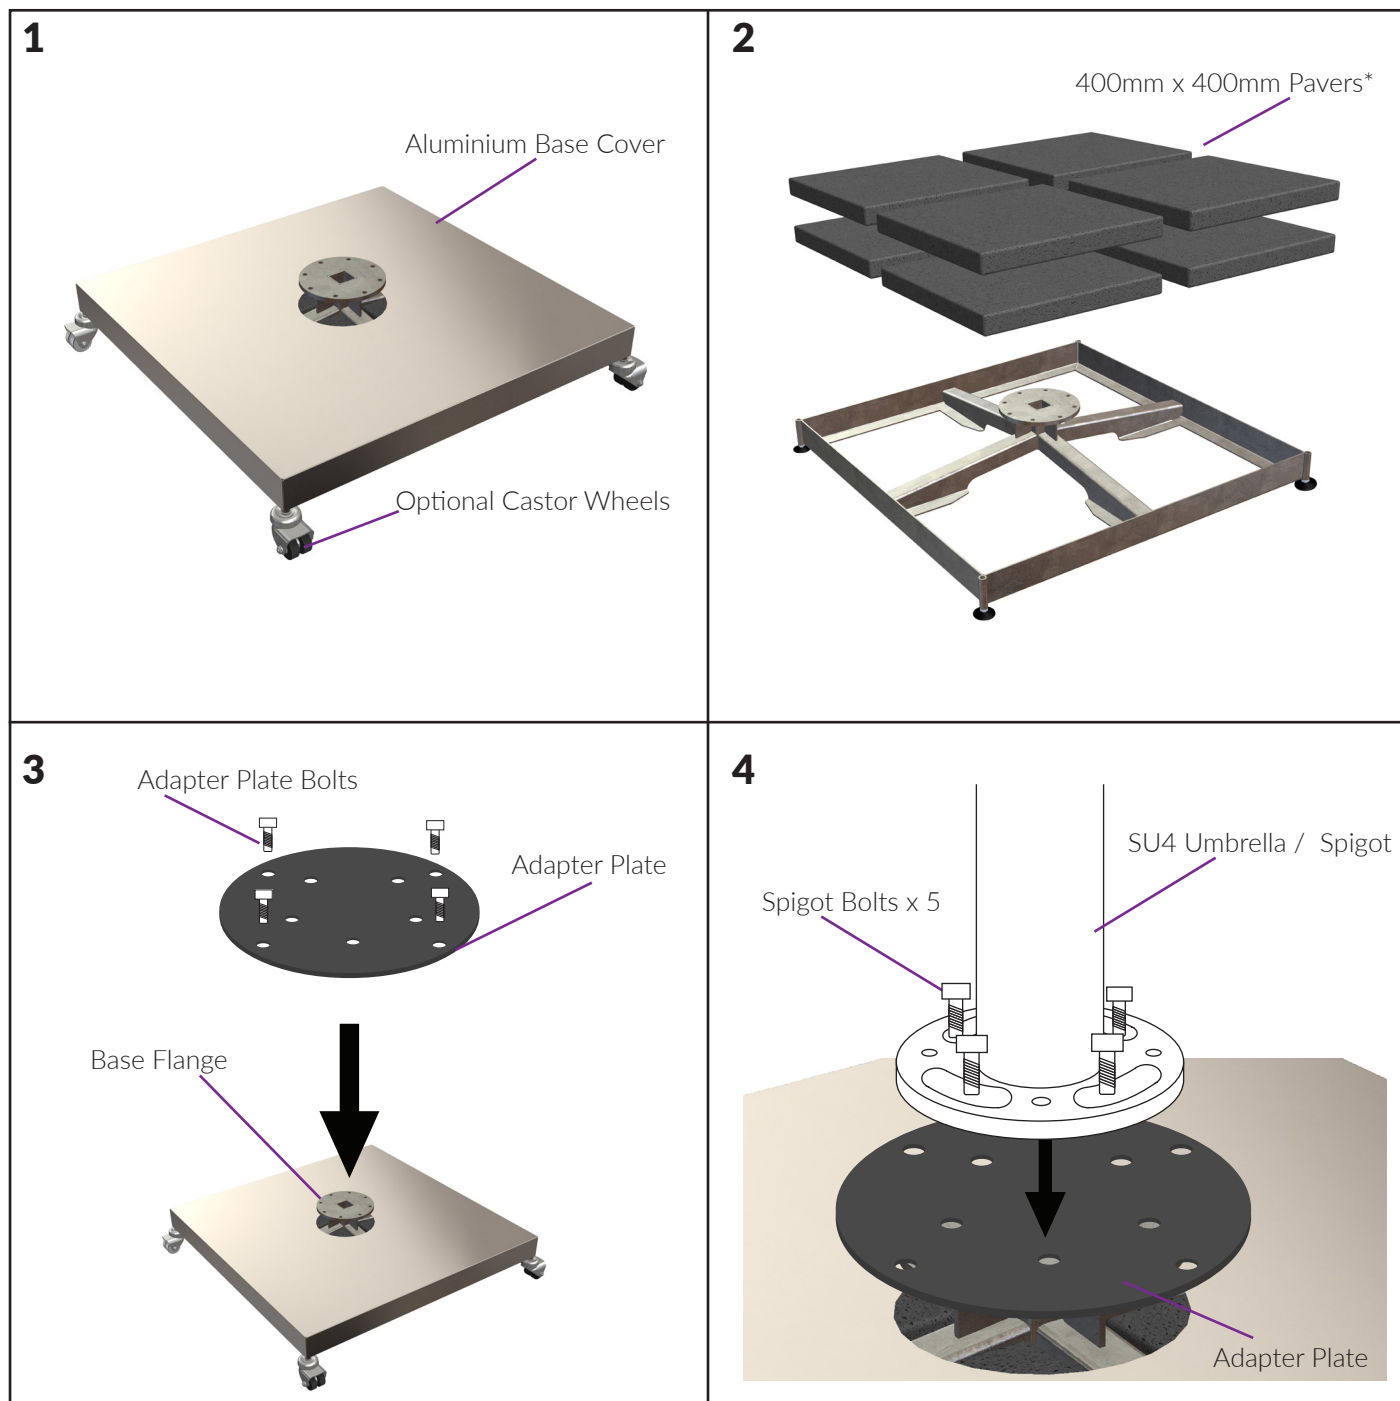

**Pavers are not supplied and can be purchased from your local hardware store*