

SHADOWSPEC **SERENITY**[™]

ROTATING CANTILEVER UMBRELLA



P01/26



OWNERS MANUAL

Installation, Operation, Care and Warranty

www.shadowspec.com

Hello,

For a stress-free installation we suggest you read this manual in full before assembling your new Shadowspec Umbrella.

Help extend the life of your umbrella investment by reading and following these care instructions on a regular basis.

Thank you for your purchase, we appreciate it.

Enjoy the shade, courtesy of Shadowspec.



Warranty Information	4
Product Registration and Warranty Validation	5
Stage 1 - Key Dimensions of Your Shadowspec Serenity	6
Shadowspec Serenity™ Part Naming	7
Umbrella Location	8
Installation Spacing - Multiple Umbrellas	9
Installation - Umbrella Orientation	10
STAGE 2 Installation of Your Umbrella Mount	11
Option 1 - Free-standing Base	12
Option 2 - In-Ground Anchor	14
Option 3 - Surface Plate	16
Option 4 - Wall Base Bracket	21
Mounting Option - Spec-sheets & Sizes	22
STAGE 3 Assembling and Mounting Your Shadowspec Serenity™	24
Assembling Your Umbrella	24
Mounting Your Umbrella	24
Fabric Canopy Installation	24
STAGE 5 Operating Your Shadowspec Serenity™	26
SECTION 4 - ACCESSORIES	28
LED Lights	TM



Warranty Information

THE SHADOWSPEC WARRANTY:

Shadowspec guarantees that Shadowspec Unity Umbrellas, that are installed in accordance with our guidelines, will be free of defects in materials and workmanship for the period of time as set out and specified below:



*Fabric Warranty relates to your umbrella Fabric Canopy. Protection Cover Warranty is 3 years.

**In commercial applications, the Fabric and Frame Warranty is 3 years.

Original Purchaser

1. This warranty applies solely to the original purchaser and is non-transferable.

What Is Covered

2. This warranty covers defects in materials or workmanship only.
3. It does not cover damage caused by wind, accidents, misuse, improper handling, insects or normal wear and tear.

Installation

4. This warranty is valid only when the umbrella is installed, maintained, and used strictly in accordance with the instructions outlined in the user manual.
5. Any installation advice provided is general guidance only.
6. It is the owner's responsibility to identify underground services such as water pipes, drainage, or electrical cables and to notify installers of any site-specific risks.
7. We accept no liability for damage incurred during installation.

Repairs & Shipping

8. This is a back-to-base warranty. If a repair is required, the claimant is responsible for all freight costs to and from our facility.
9. Any costs associated with on-site technicians or repairers are the responsibility of the claimant.
10. Repairs or replacements completed under warranty are covered for the remainder of the original warranty period. This does not extend or restart the warranty term.

Hardware – Fixings & Frames

11. Umbrella frames, mounts, and fittings may include powder-coated steel, galvanized steel, and stainless steel.
12. Surface rust or tea staining is a natural characteristic of steel products and is not considered a manufacturing defect.

Repair & Replacement Decisions

13. All warranty claims are assessed to determine whether the issue relates to materials, workmanship, or external factors.
14. Where a valid fault is confirmed, we reserve the right to repair or replace the item at our discretion.

Fabric Canopies

What Is Covered

15. Colour fading only.

Note: The acrylic fabric is engineered for high colour fastness throughout the warranty period.

Red, orange, and yellow shades may fade more quickly than darker or neutral colours.

What's Not Covered

16. Damage caused by wind, weather, misuse, burns, vandalism, punctures, stains, insect bites or normal wear and tear.
17. Wear or holes caused by fabric rubbing or pinching against the frame.

Tip: When closed, make sure the fabric canopy is not trapped between the frame.

Fold any loose material and secure it with the canopy strap to prevent rubbing.

Accessories

18. All optional accessories have a 1-year warranty including, but not limited to: Rain Gutters, Drop Blinds, Smart Batteries, Hard-wire Kits, and Castor Wheels.
19. Mounting options are included in the frame warranty.

Disclaimer

20. Except as explicitly stated in this warranty, all other warranties, representations, conditions, obligations, or liabilities, whether implied by law or otherwise, are expressly excluded.



PRODUCT REGISTRATION

It's important that your product is looked after and that starts with registration to validate your warranty. Please visit our website at the link below to register your product.

www.shadowspec.com/register



Umbrella Care and Maintenance

Regular care and maintenance of your umbrella is essential.

The following points will assist in keeping it looking smart and clean while also ensuring its ongoing performance and reliability.

- To extend the life of your umbrella as long as possible, we recommend purchasing a Protection Cover for your umbrella and covering your umbrella with it whenever it is not in use.
- Close and cover your umbrella in adverse conditions. This includes heavy rain, snow, hail and high wind.
- Take care when opening or closing your umbrella - always check for obstacles such as; trees, ladders, furniture, people.
- Umbrellas should never be left stored or collapsed for long periods while wet. Always ensure that the fabric is dry before storing or closing for long periods of time.
- Any early signs of mould or mildew **must** be removed as soon as it's discovered.
- Your umbrella's Fabric Canopy is removable and washable. See fabric cleaning instructions below.
- Never clean any part of your umbrella with a corrosive or abrasive product or a high pressure hose.
- Never use waterproofing or cleaning sprays on your Fabric Canopy without seeking appropriate advice first.
- All moving parts on your umbrella are best maintained with an annual application of dry lubricator, such as a wax based spray.
- From time-to-time, inspect your umbrella and ensure all the accessible screws/bolts and other fixings remain tight. If they appear loose, tighten them with the supplied toolkit.

Tips: **1. Keep your toolkit stored in a safe place for future maintenance.**

2. For commercial applications, contact us for our preventative maintenance guides.

FABRIC CLEANING INSTRUCTIONS:

Shadowspec Fabric Canopies are manufactured from the most durable marine fabrics, threads and designs available. Shadowspec Fabric Canopies should be cleaned on a regular basis so dirt isn't allowed to build-up and become embedded in the fabric. You can clean your Fabric Canopy without removing it from the Frame if you prefer, or it's as easy to remove as it was to put on. Brush off any loose dirt and particles, hose it down and clean with lukewarm water temperature and mild soap. Rinse again to remove all the soap before allowing the Fabric Canopy to air dry.

Do not use heavy detergents!

If you have found a stain that won't come off with our standard cleaning instructions, a '303' Fabric Cleaner is recommended. First, trial a small area of the fabric to ensure there is no discolouration or adverse effect. After cleaning it's important that you treat the fabric with a water repellency agent. We recommend the '303' protectant is used to restore the repellency.

Note: When washing or cleaning, do not subject to excessive heat as the fabric will shrink. Do not steam press or dry in an electric or gas dryer. Always allow your Fabric Canopy to air dry. If you take the umbrella down for winter, take time to clean and air dry your Fabric Canopy before storing in a well ventilated area.

For full manufacturers recommendations regarding care of our Canopy Fabrics:

global.sunbrella.com/en-us/how-to-clean for detailed care instructions.



Stage 1 - Key Dimensions of Your Shadowspec Serenity™

As the Shadowspec Serenity is available to you in a variety of configurations, care must be taken to check the sizing of your chosen umbrella in the following table.

Key Measurement Notes:

Free-Standing Base installations will add 165mm | 6" to the height

Surface plates will add 12mm | 1/2" to the height.

Adding Free-Standing Base wheels will add a further 45-80mm | 2-3" to the height.

Figure A - Shadowspec Serenity Umbrella Dimensions

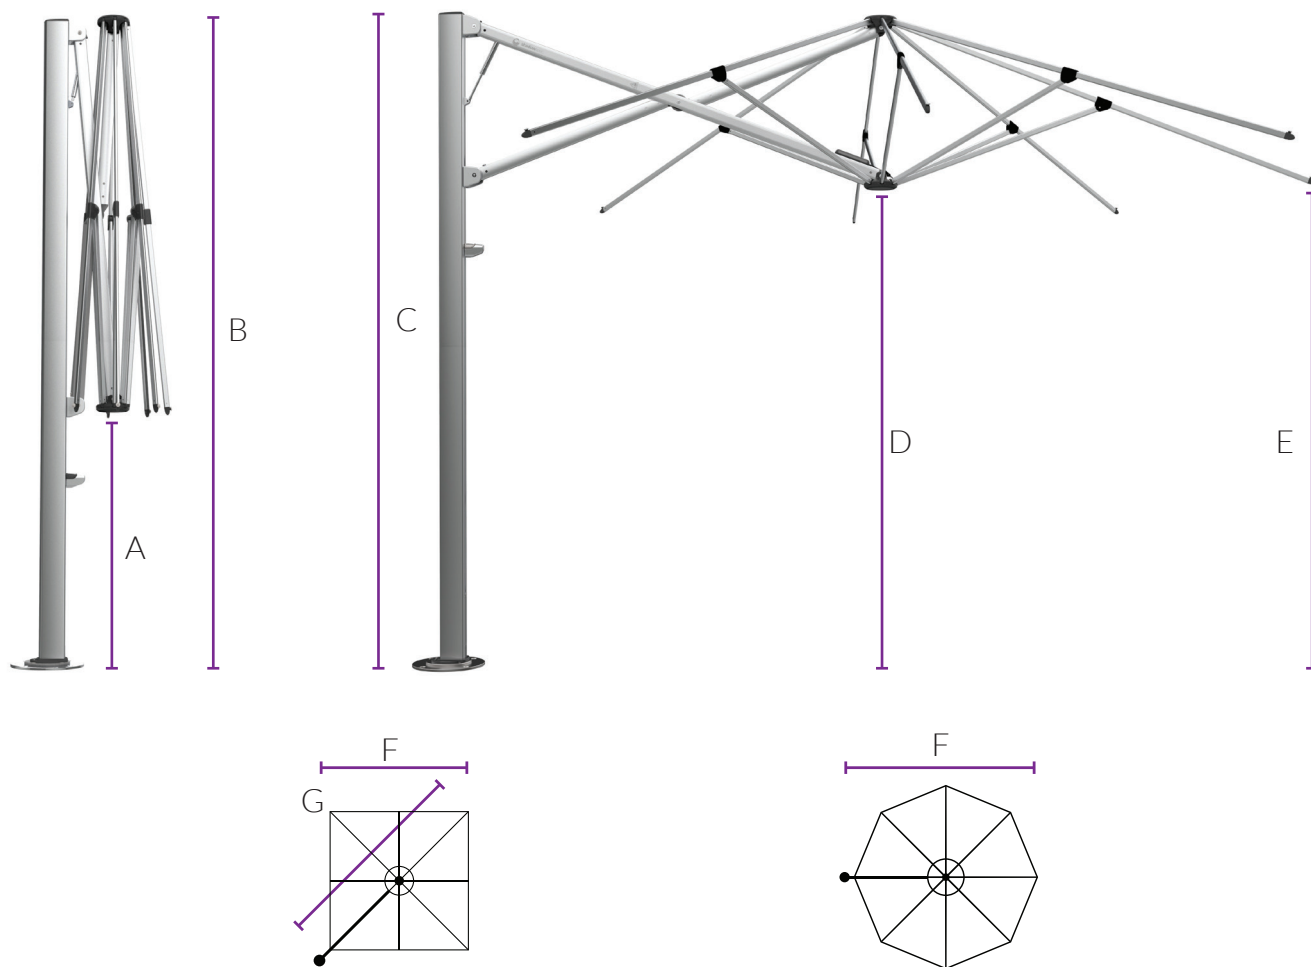


Diagram Legend	2.5m	8'	3.0m	10'	3.5m	11'	4.0m	13'
A Ground to central frame hub when closed*	860mm	2'10"	620mm	2'1"	1079mm	3'7"	866mm	2'10"
B Total height to top of canopy*	2900mm	9'6"	2824mm	9'3"	2975mm	9'9"	2899mm	9'6"
C Height of umbrella to top of mast cap*	2908mm	9'6"	2908mm	9'6"	2908mm	9'7"	2908mm	9'6"
D Ground to central frame hub when open*	2130mm	7'0"	2054mm	6'9"	2205mm	7'3"	2128mm	7'0"
E Ground to lower outer edge of canopy*	2222mm	7'3"	2219mm	7'3"	2237mm	7'4"	2172mm	7'2"
F Centre of Spigot to outside edge of canopy	2646mm	8'8"	2973mm	9'10"	3447mm	11'4"	3923mm	12'10"
G Diagonal from centre of mast to corner	3742mm	12'3"	4205mm	13'10"	N/A	N/A	N/A	N/A

Note: All sizings and conversions are +/- 2.5mm / 2/32" and are subject to change without notice.

It is recommended for commercial installations that metric measurements are used for any umbrella spacing to ensure accuracy



Shadowspec Serenity™ Part Naming

When unpacking your Serenity umbrella please check you have all the correct parts pictured below before beginning assembly. If any parts are missing please contact customer@shadowspec.com to resolve.

You will need to refer back to this page so why not earmark it for quick reference whilst you're assembling your umbrella.

Figure B - Serenity Umbrella Parts


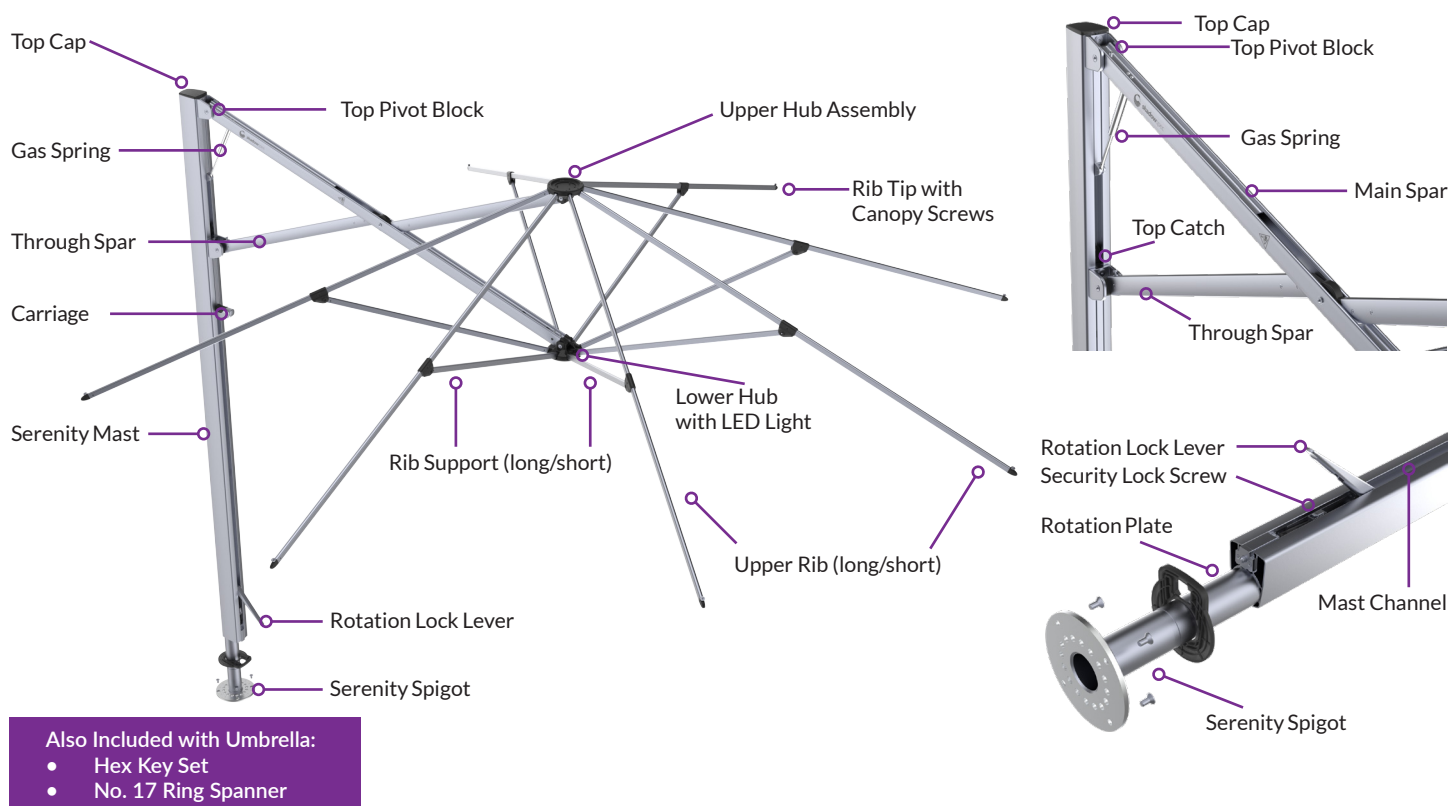


Figure C - Frame Canopy Parts

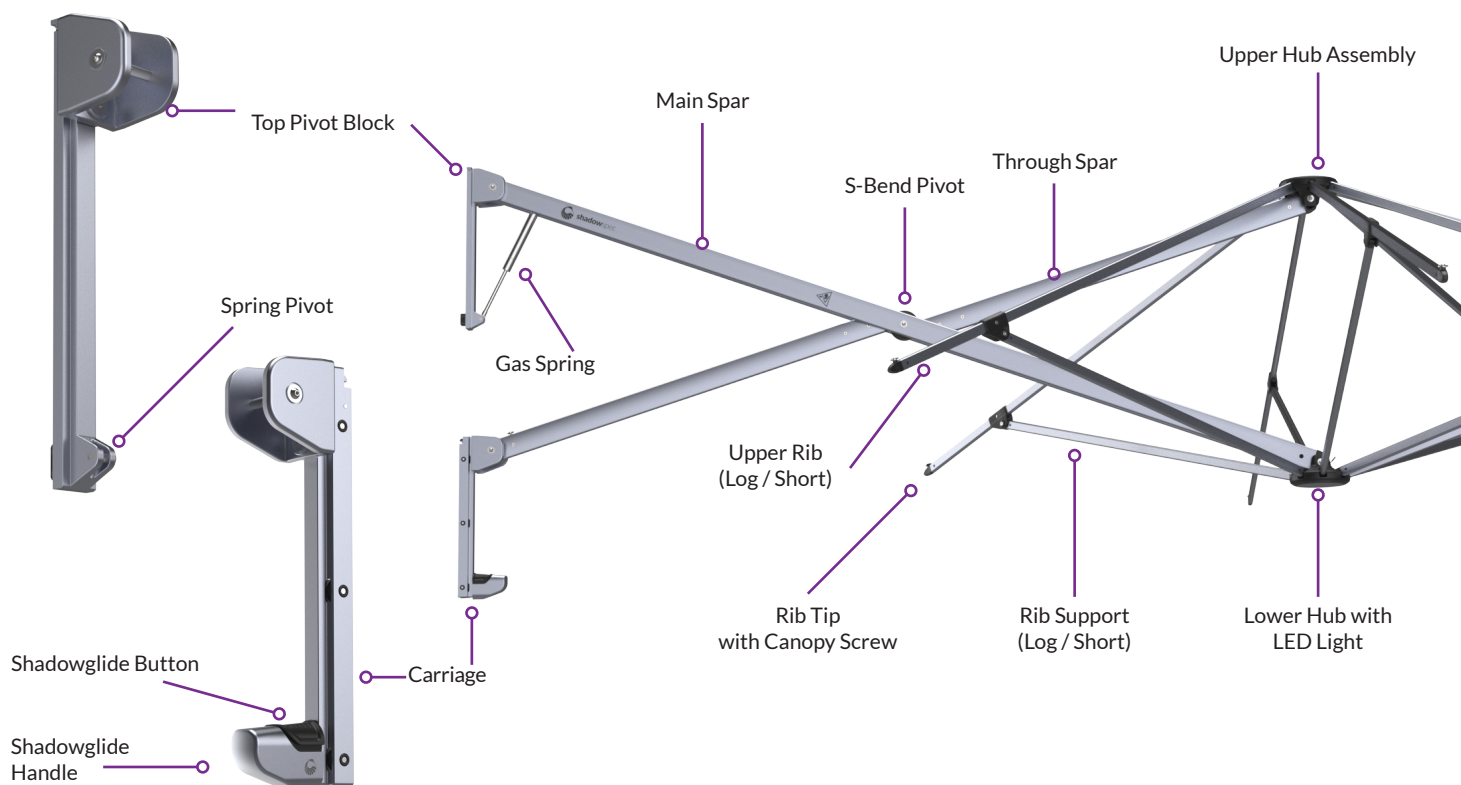

Planning your Umbrella Location.

Special care is needed when selecting the best location for your umbrella. Some key points to keep in mind are:

1. Check that your chosen installation position will give you optimal coverage of the area you're looking to shade.
2. Consider the direction the sun travels during key months of the year. If unsure, we recommend downloading a free-to-use sun-tracker app to your smartphone.
3. Take care to double, or even, triple check your measurements.
4. Check measurements for the Rotation Lock Lever and its clearance when placing close to a wall.

Detailed and up-to-date measurements and
spec-sheets are available online at:
[shadowspec.com/cad](https://www.shadowspec.com/cad)

Offset, Opposing & Reflecting Umbrellas.

A popular choice when installing Shadowspec Serenity and Shadowspec Unity umbrellas is to pair them in a “flock”. This, of course, requires specific measurements to ensure the umbrellas can open beside each other and in the case of square frames, fit an additional raingutter in between them.

The following diagrams will show you how far apart to set the Spigots of your Shadowspec Serenity when matching it with another Shadowspec Serenity or Shadowspec Unity.

These measurements are from centre of the Spigot to the centre of the Spigot for the adjacent umbrella.

For accuracy, we recommend using the metric measurements. Below you will find several common layout options and the measurements relevant to them for your reference. Please also complete your own measurements to double check before installation. Contact customer@shadowspec.com with any installation or spacing questions.

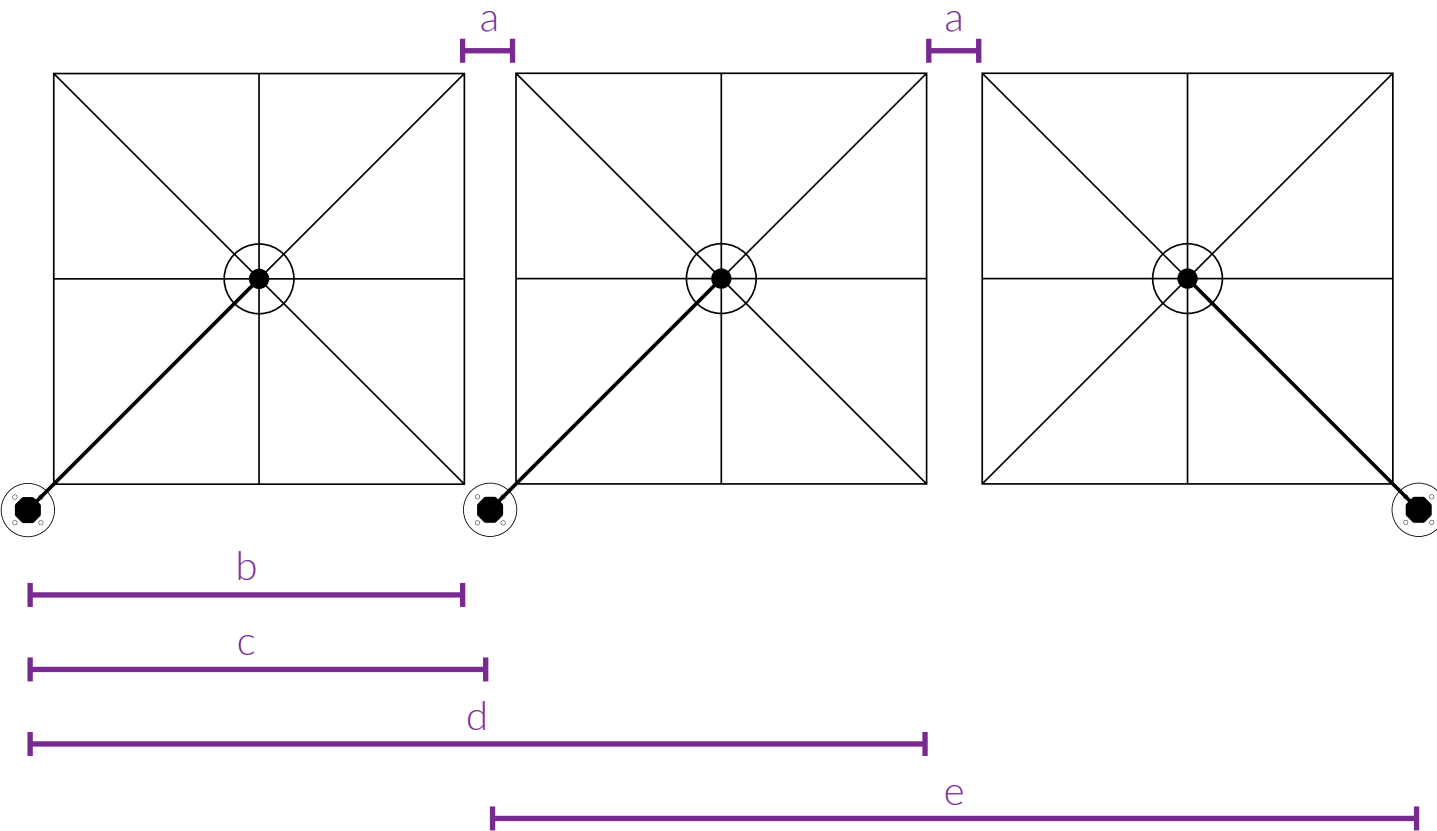


Diagram Legend		2.5m	8'	3.0m	10'
a	Gap between Canopy Frames	158mm	6"	160mm	6"
b	Centre of Spigot to outside edge of canopy	2648mm	8'8"	2980mm	9'9"
c	Centre of Spigot to Centre of Second Serenity/Unity	2727mm	8'11"	3060mm	10'1"
d	Centre of Spigot to outside edge of Second Serenity/Unity	5375mm	17'8"	6040mm	19'10"
e	Centre of Spigot to Center of Second Spigot (reflected)	5454mm	17'11"	6120mm	20'1"


Note: All sizings and conversions are +/- 2.5mm / 2/32" and are subject to change without notice.

Aligning your Umbrella.

When you install your umbrella, you need to be conscious of the orientation in relation to the buildings, walls and other umbrellas in your space.

When installing your umbrella using the Surface Plate (page 16) or the In-Ground Anchor (page 14) you need to align the bolt holes with the existing structures.

- Step 1** Locate the Bolt Holes on your chosen mounting option. (Diagram I and II)
- Step 2** Draw an imaginary box along the center of each bolt hole to create a square. (Diagram III)
This will give you the orientation, required to match existing structures and other umbrellas.
- Step 3** Before creating any holes, align the square parallel to the existing structure. Any secondary umbrellas should then be aligned in parallel with the holes to ensure correct orientation. (Diagram IV)
- Step 4** Double check your measurements and orientation before affixing your umbrella. (Diagram V)

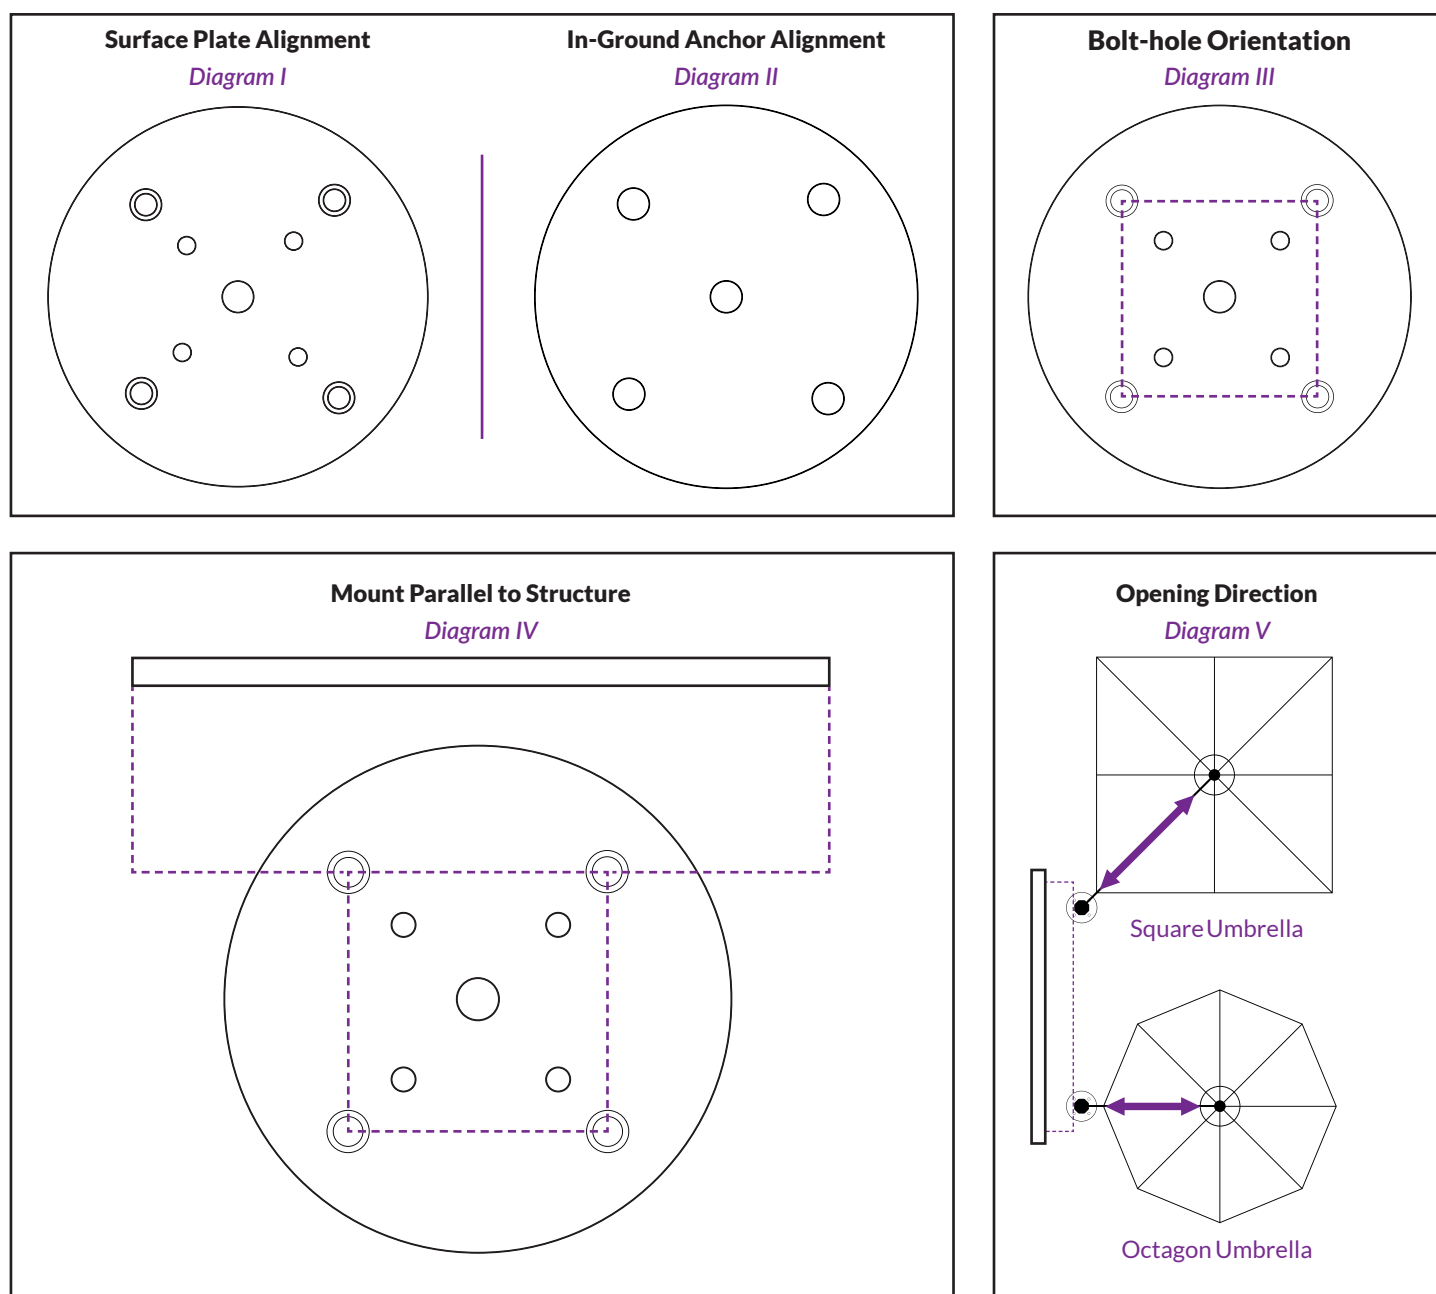

Stage 2 - Installation of Your Umbrella Mount

We offer four different mounting options. Please relate to the section relevant to your purchased mounting option. We recommend that you read through all of the instructions before starting. It's worth it, trust us.

Step 1 First, unscrew the Security Lock Screw under the Rotating Lock Lever - *Figure D*.

Step 2 Remove Spigot from your umbrella Mast.

Step 3 Affix the Spigot to your mounting option of choice (**Options 1 - 4**).

Step 4 Grease the Spigot with the supplied Spigot Grease.

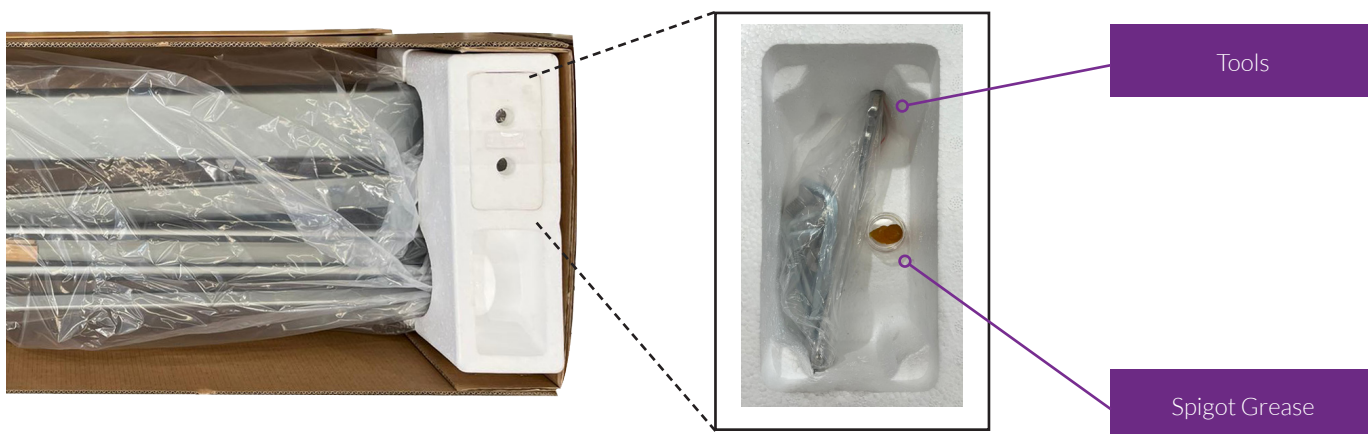


Figure D - Location of Security Lock Screw


Security Lock Screw



Serenity Spigot

Please don't use the Rotation Lock Lever to lift the Shadowspec Serenity Umbrella - it could break and not be covered by warranty.

1. Free-standing Base

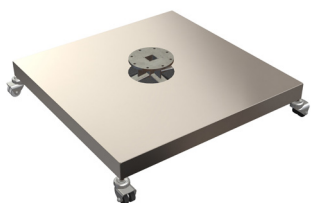


Page 12

2. In-Ground Anchor




Page 14

3. Surface Plate

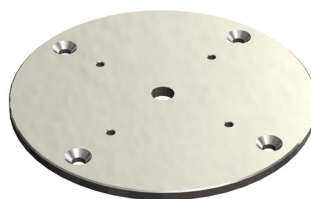

Page 16

4. Wall Base Bracket

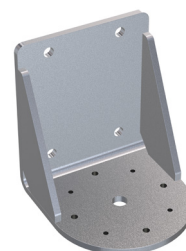

Page 21



Option 1 - Free-Standing Base

For installation you will require:

- An adjustable spanner (there is a No. 17 Ring Spanner included with umbrella box)
- Hex Key Set - Included in your umbrella box
- The complete Free-standing Base kit. See **Figure E** of included components

Step 1 Turn the Free-standing Base upside down.

- a. Screw the supplied Threaded Feet into each corner of the underside of the Base.
- b. If you've purchased the Optional Wheels / Castors, screw them into the corners instead. See **Figure F**.

Step 2 Return the Free-standing Base to its correct orientation, supported on its Threaded Feet / Optional Castor.

Step 3 Affix the Spigot to the Free-standing Base using the provided Serenity Screws and Nuts. It's important to use the holes between the pavers to ensure there's enough clearance when you insert the pavers in Step 6.


Step 4 If you are using the feet mount option, adjust the height of the feet to ensure the base is level.

Step 5 Place the Free-standing Base in the desired location.

Step 6 Insert the 12 pavers for ballast then slide the base cover over top.

Step 7 Slide your Rotation Plate over the Spigot and move on to **The Installation Stage (Page 24)**

Figure E - Free-Standing Base Parts

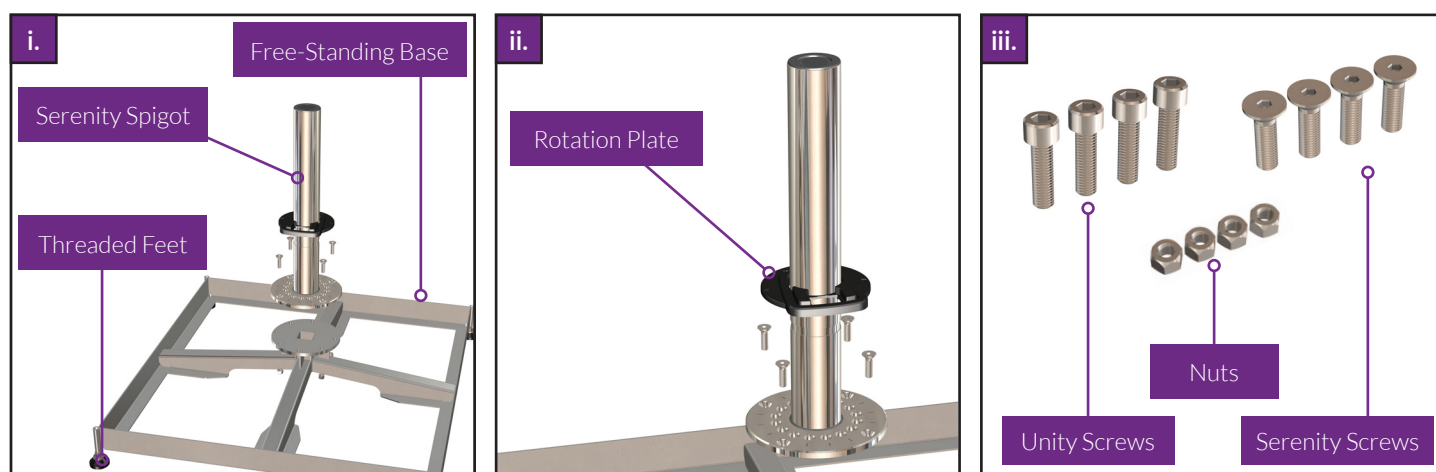

*Both Serenity and Unity Screws are included in box. Only use the set required for your Serenity and the Unity Screws will be surplus.

You must use 12 concrete pavers to provide ballast for your umbrella. - Diagram i

Note: Your warranty will be void if you do not have 12 pavers in your Free-Standing Base, three per quadrant.

The base is designed for:

12 x 16x16x13/4" | 400x400x40mm pavers. (WxLxH).

The pavers are not included or supplied by Shadowspec. They can be purchased from a building supply, DIY or hardware store near you.

Note: For sufficient umbrella ballast, please read this critical information.

Availability of paver heights and sizes may vary from supplier to supplier.

- The three layers of pavers must have a combined height of at least 5" | 120mm
- The maximum combined height of the three layers of pavers cannot exceed 5 1/2" | 138mm

Stacking the pavers - Diagram ii

If the combined height of the three layers of pavers exceeds 5 1/2" | 138mm you must use a paver with less height as the middle layer.

This shorter (H) middle paver can also be smaller than the recommended (WxL) 16x16" | 400x400mm if necessary.

Example using common paver options:

Bottom paver	400x400x50mm / 16x16x2"
Middle paver	300x300x38mm / 12x12x1 1/2"
Top paver	400x400x50mm / 16x16x2"

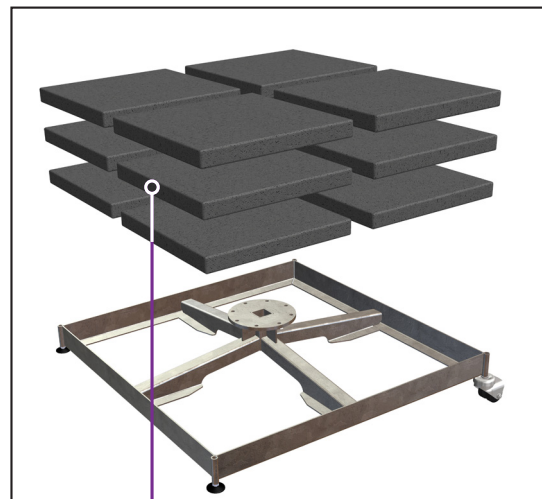


Diagram i:
12 pavers of equal height stacked in 3 layers

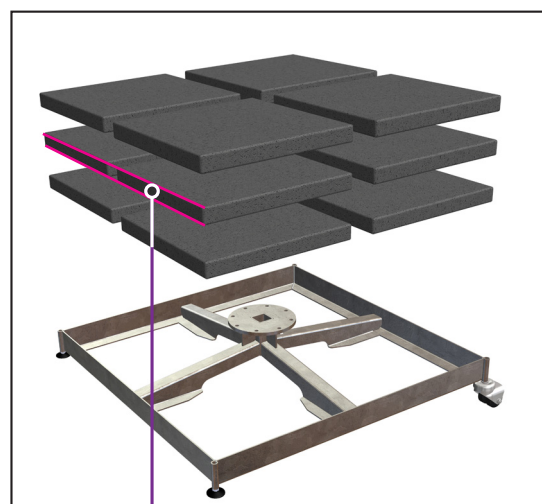


Diagram ii:
Shorter paver as the middle layer

Optional Accessories



Castor Wheels

Optional Castor Wheels can be affixed in place of the supplied Threaded Feet.

Contact us if you haven't already purchased the Optional Castor Wheels.

Option 2 - In-Ground Anchor

For installation you will require:

- Wheelbarrow and Spade.
- Concrete Mix - not included. Can be purchased from your closest building supply, DIY or hardware store.
- Spare wooden planks or other bracing materials
- Hex Key Set. This is included with the Umbrella.

- Step 1** Choose your site and ensure the ground is level. Check for buried utilities.
- Step 2** Dig your footing hole at least 500mmW x 500mmL x 600mmH / 1'7" x 1'7" x 1'11". It is recommended that you flare the footing hole slightly at the base for extra stability - See [Figure H](#).
- Step 3** Using the Screws supplied with your Umbrella, fit the spigot to the In-Ground Anchor. - See [Figure G](#).
- Step 4** Prepare the concrete mix in your wheelbarrow.
- Step 5** Position the In-Ground Anchor in the hole and ensure the anchor is level. See [Figure G.iii](#) for where the ground level should be. Ensure orientation is correct for how you wish to position your umbrella - see [Page 10](#).
- Step 6** Pour concrete into the hole up to the bottom of the Spigot base. DO NOT cover any part of the Serenity Spigot. See [Figure G](#).
- Step 7** Use bracing and support to ensure the In-Ground Anchor and Spigot stay level.
- Step 8** Allow at least 24-hours for the concrete to cure - your chosen product will have a recommended time on the packaging so double check this.
- Step 9** Slide your Rotation Plate over the Spigot and move on to **Stage 4 - Page 24**.

Figure G - In-Ground Anchor Parts


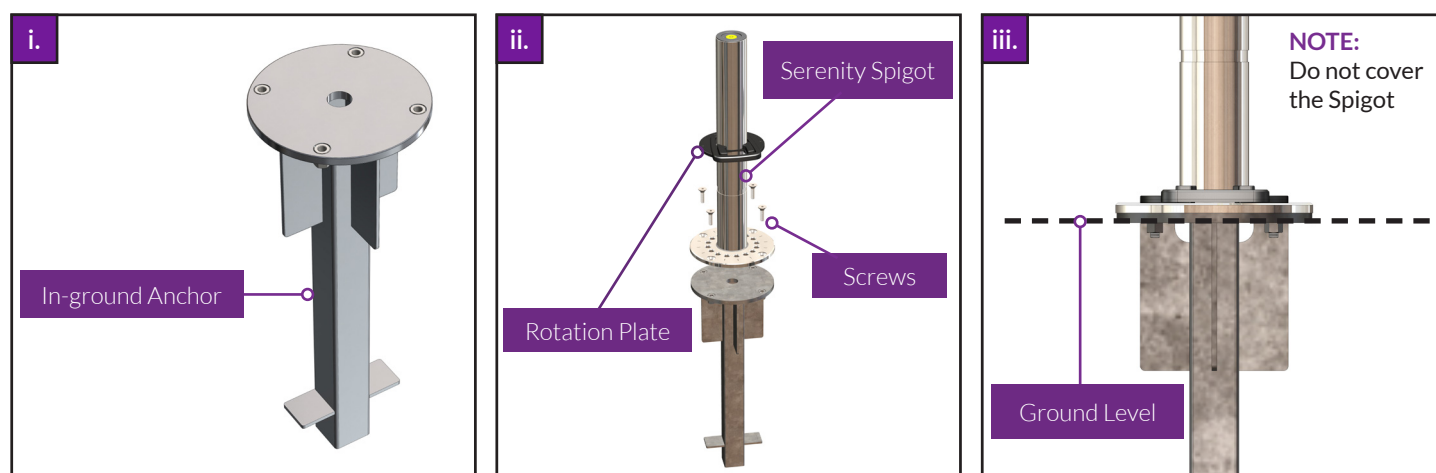


Figure H - In-Ground Anchor Installation, Mast Orientation and Suggested Specifications

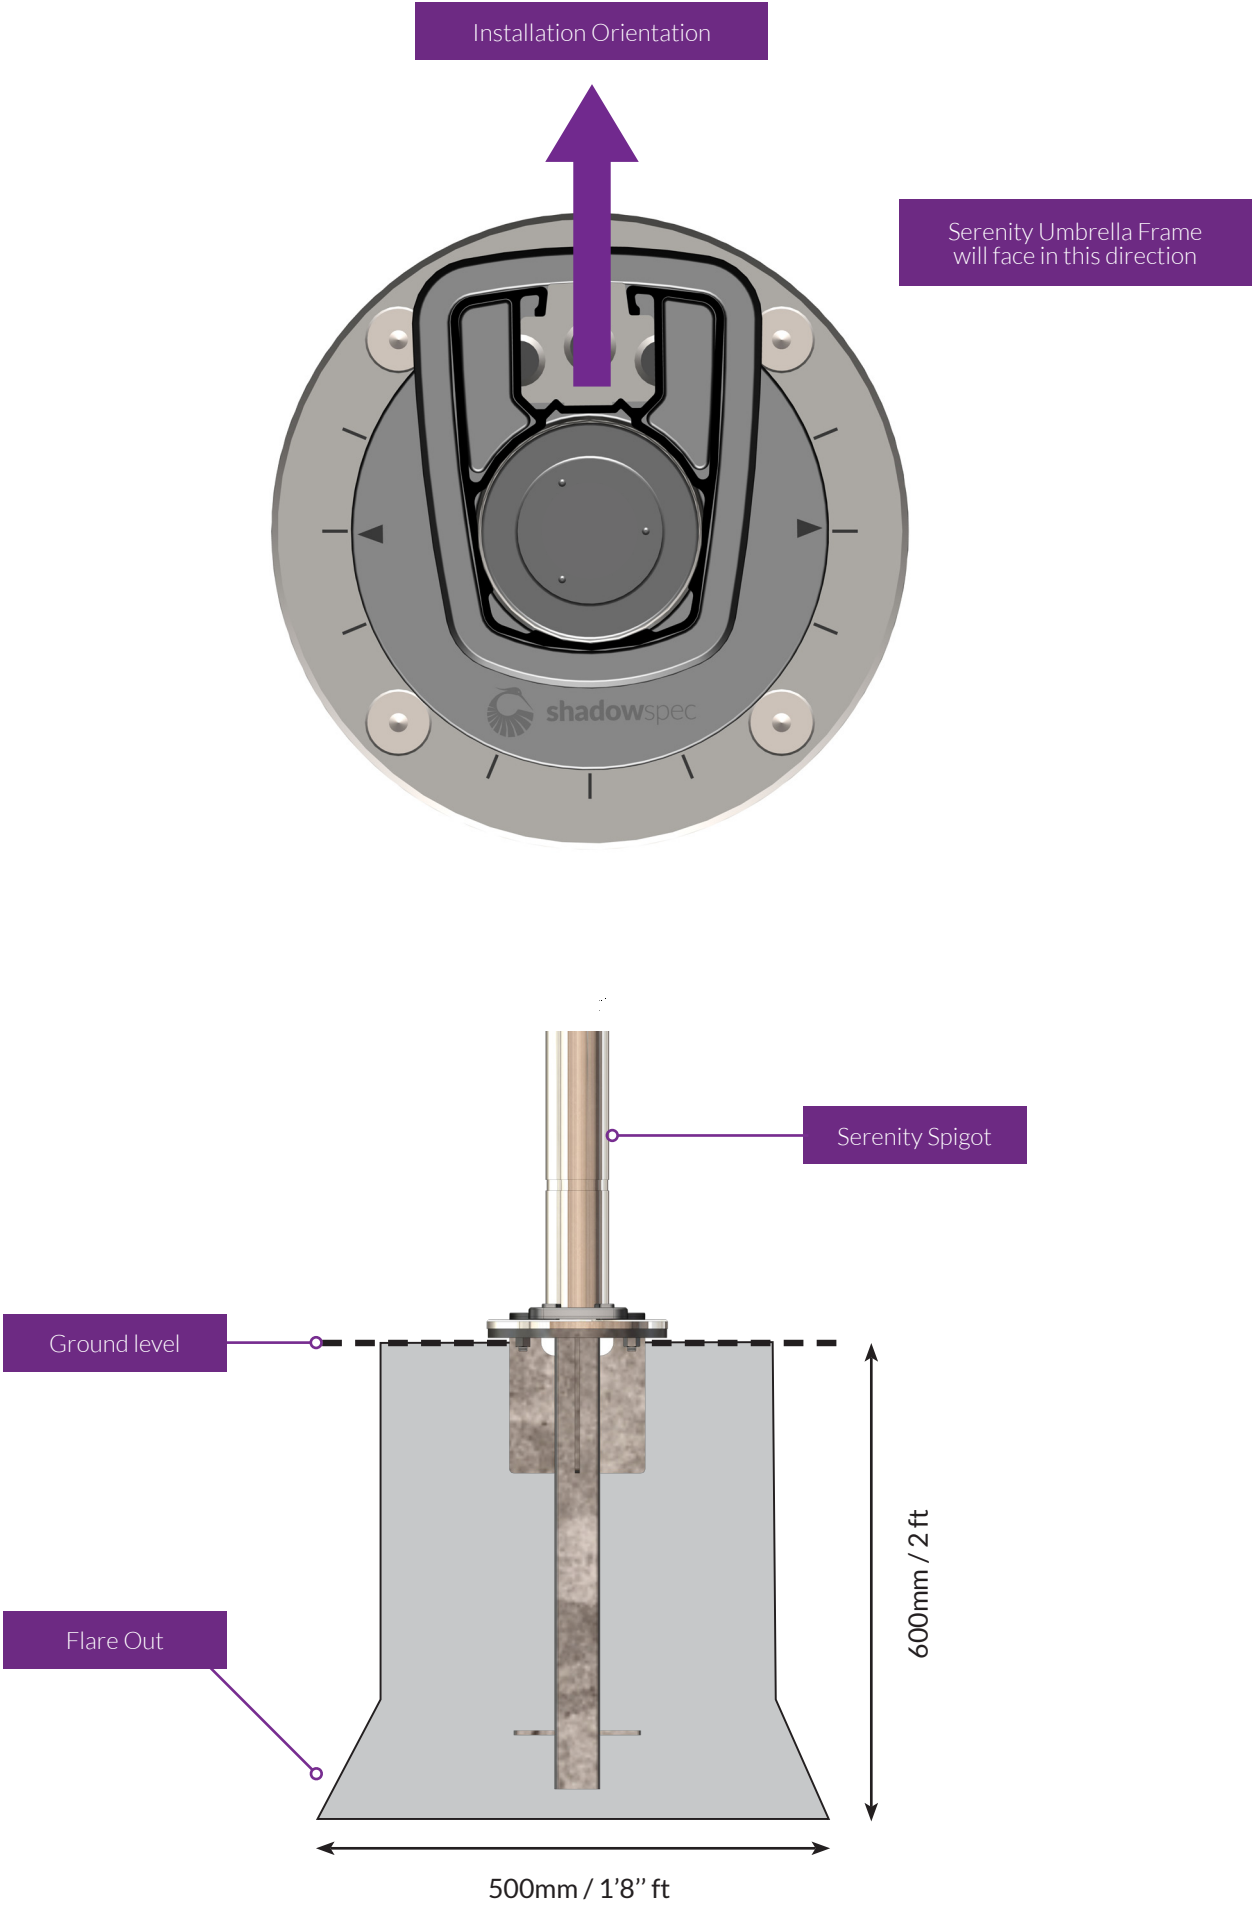

Option 3 - Surface Plate

For installation of the Surface Plate you will require:

Hex Key Set which is included with umbrella

- Corrosion proof washers for leveling base (316 Stainless Steel Bolts, Nuts and Washers are recommended) For installing to a **wooden deck** you will require:
- 4 x 12mm CSK Bolts and matching Nuts (not supplied - length will depend on the thickness of the deck and bracing timbers you are fixing through)

Or, for installing to a **concrete slab** you will require:

- 4 Dyna-Bolts or Concrete Screws (not supplied - recommended at least 100mm / 4" long)

- Step 1** Choose your site. It's important that the chosen site is clean, level and structurally sound. See [Page 10](#) for correct orientation for either your square or octagon canopies.
- Step 2** Place the Surface Plate in your chosen location. Install Spigot on top of Plate - Use bolts included with umbrella see [Figure I](#).
- Step 3** Check the spirit level on the top of the Spigot.
- Step 4** Slide washers under the base to level if required. Use corrosion resistant washers.
- Step 5** Mark the position of the bolt holes on the surface.
- Decking:** Ensure your bolts are running through a joist for stability. You may need to lift up some planks and install extra timber joists or bracing between existing joists - see [Page 18 & 19](#)
 - Concrete Slab:** Recommended minimum depth of 100mm / 4" (reinforced)- See [Figure K](#).
 - It's also recommended to use washers to space the plate on the decking to allow water to escape to minimise water damage to the deck.
- Step 6** Drill pilot holes on the marks and check that the pilots are in the right place by laying the Surface Plate over the top of them, and then if correct, drill the proper holes.
- Step 7** Use your bolts to secure the Surface Plate and Spigot to the chosen spot.
- Step 8** Slide your Rotation Plate over the Spigot and move on to **Stage 4 - Page 24**.

Figure I - Surface Plate



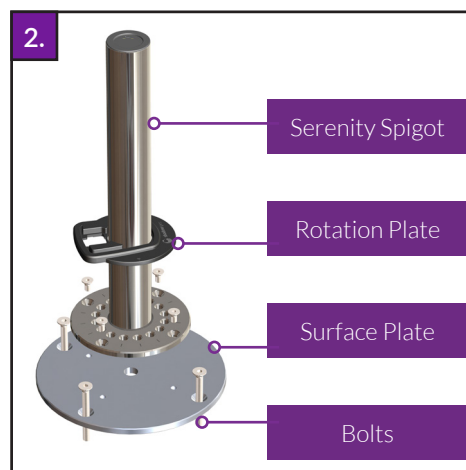


Figure J - Securing Surface Plate to Concrete Slab

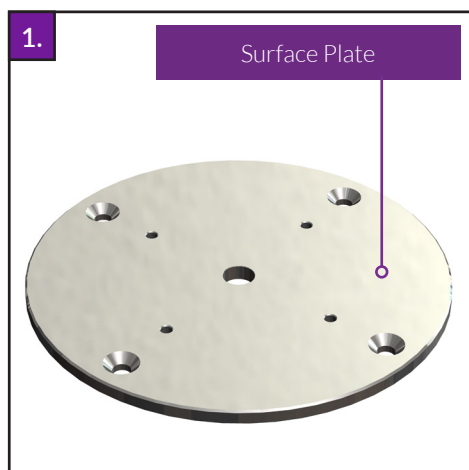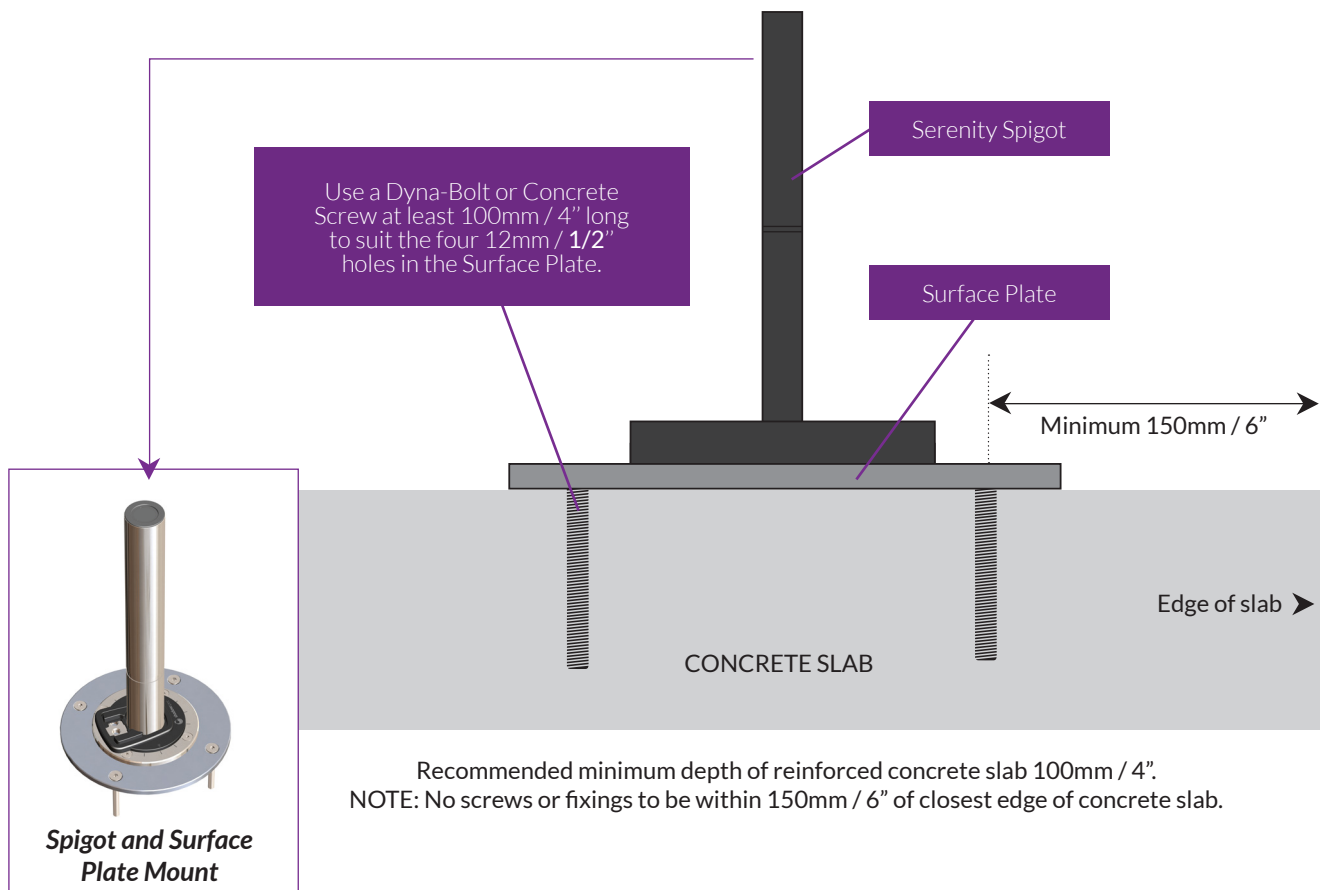

Surface Plate Deck Install Guide


The following guide is designed for prebuilt decks. To ensure sufficient strength you should install additional nogs/joists in between the existing bearers on your deck.







You will require the following:

- 4x 100mm x 100mm Timber Nogs/Joists
- Sufficient screws
- Electric screw driver / drill
- Replacement nails / screws
- 4 x 12mm CSK Bolts and matching Nuts (not supplied - length will depend on the thickness of the deck and bracing timbers you are fixing through)

- Step 1** Determine the installation location on your deck.
- Step 2** For access, remove enough decking to access at least 400mm | 1'4" of space for the next steps.
- Step 3** Ensure the additional timber nogs/joists are spaced with their center 270mm | 11" apart for the surface plate to be screwed into.
- Step 4** Insert 100mm x 100mm | 4" x 4" timber nogs/joists between existing bearers.
- Step 5** Replace the timber decking we recommend using screws to ease of re-access.
- Step 6** Install your surface plate as per [page 16](#) and [Figure I](#).

Figure K - Securing Surface Plate to Wooden Deck

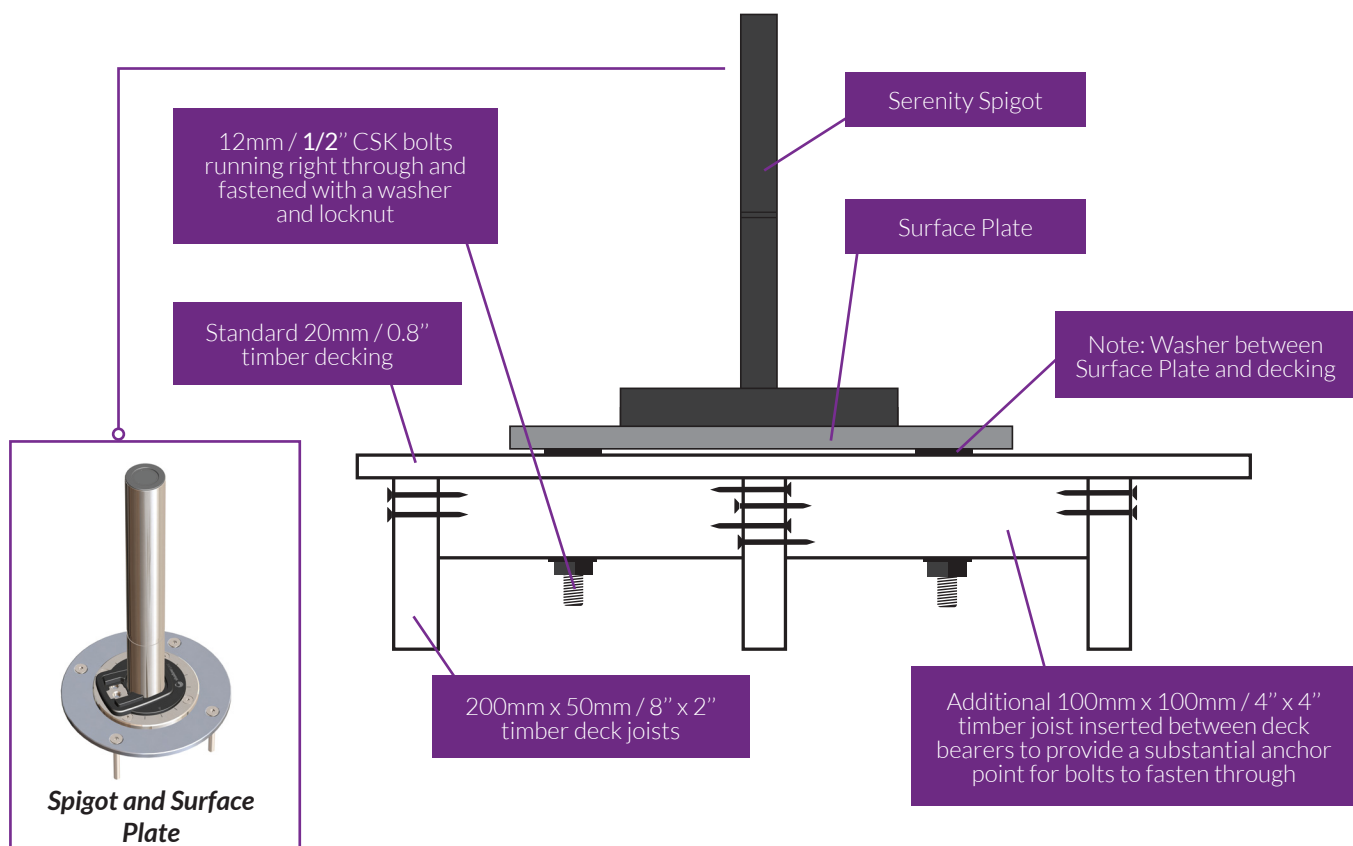

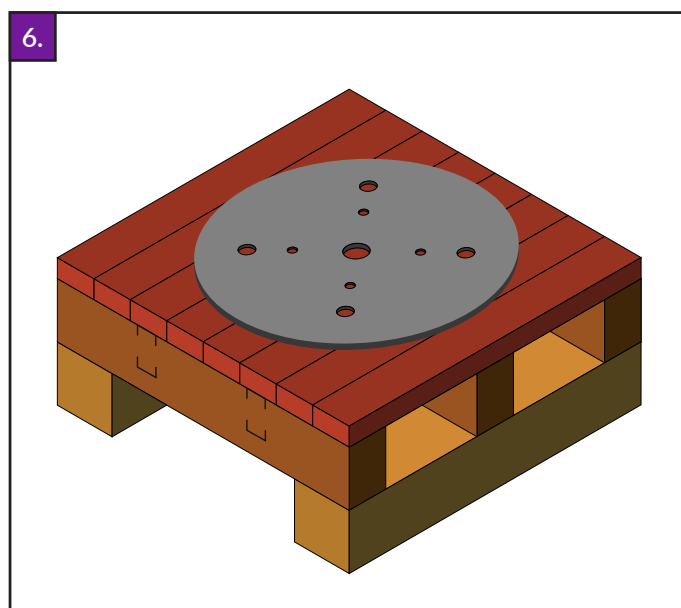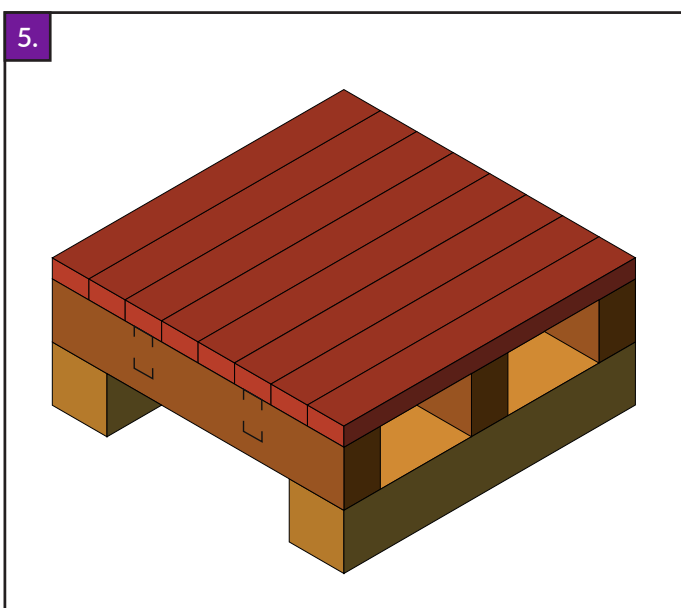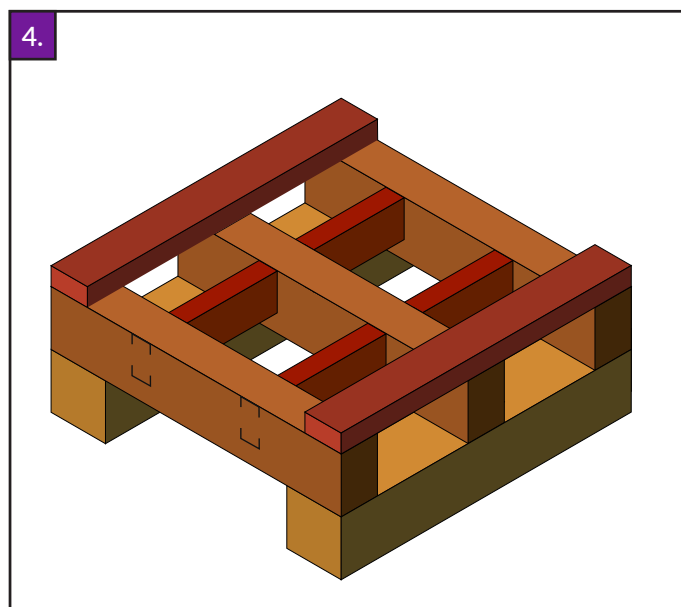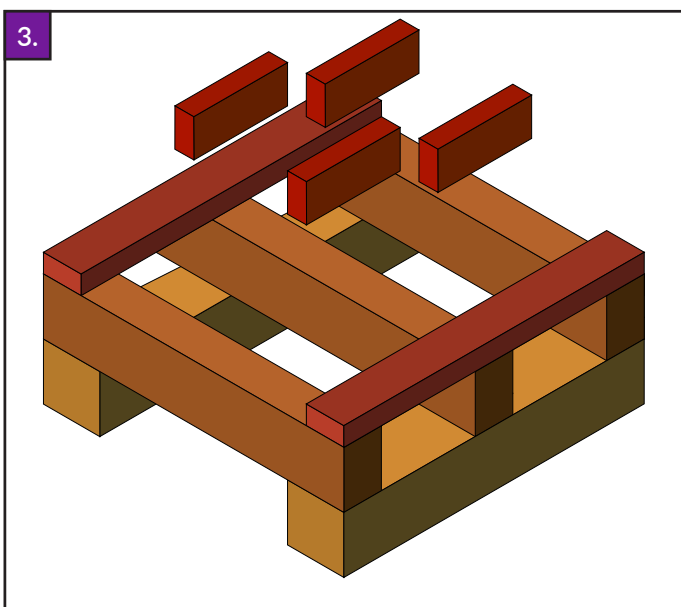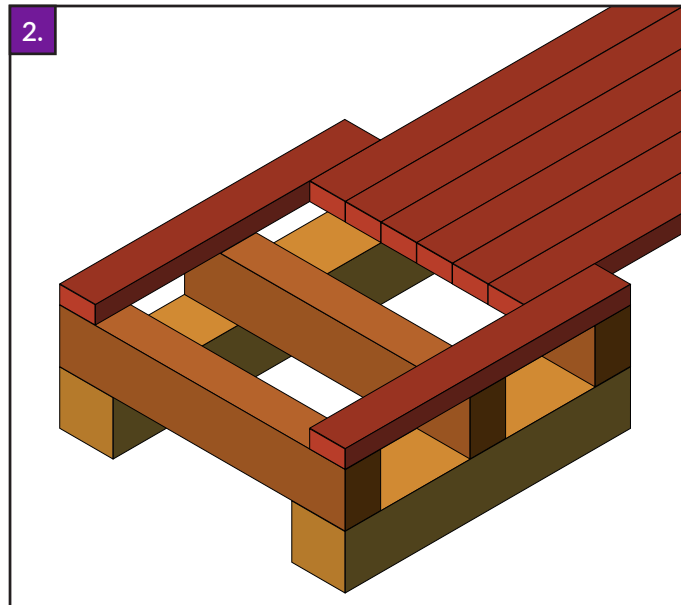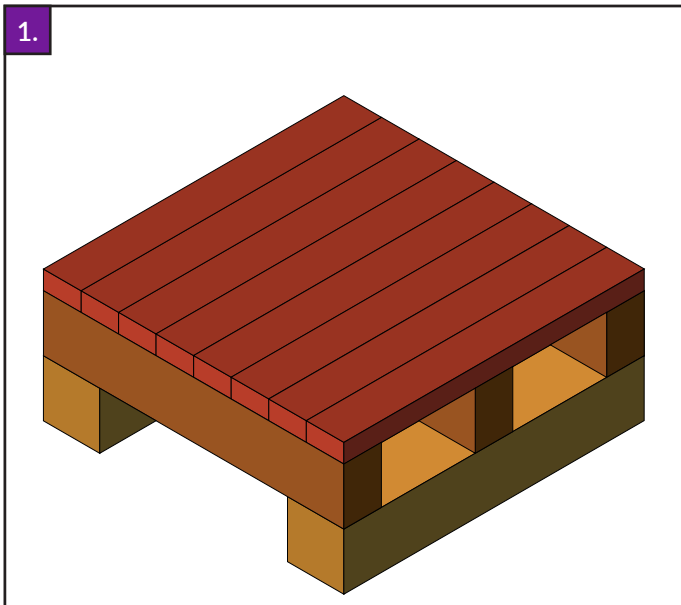

Surface Plate - Equipotential Bonding Point

For umbrellas installed within an arms reach of a body of water, then Equipotential Bonding must be performed by a licensed electrical person prior to the product being used.

Note: The following instructions assume your pool area has been installed with an earth system built in. The following work should be performed by a registered electrician.


Step 1 Join your pre-installed earthing cable to the supplied Lug

Step 2 Use the supplied screw to affix the Lug onto the top of the Surface Plate

Note: You will need to install the Lung underneath the Surface Plate on Unity installations.

Step 3 Drop the earth cable through the central cable hole.

Step 4 Ensure the earth cable is attached at the other end to the pre-installed earth loop.

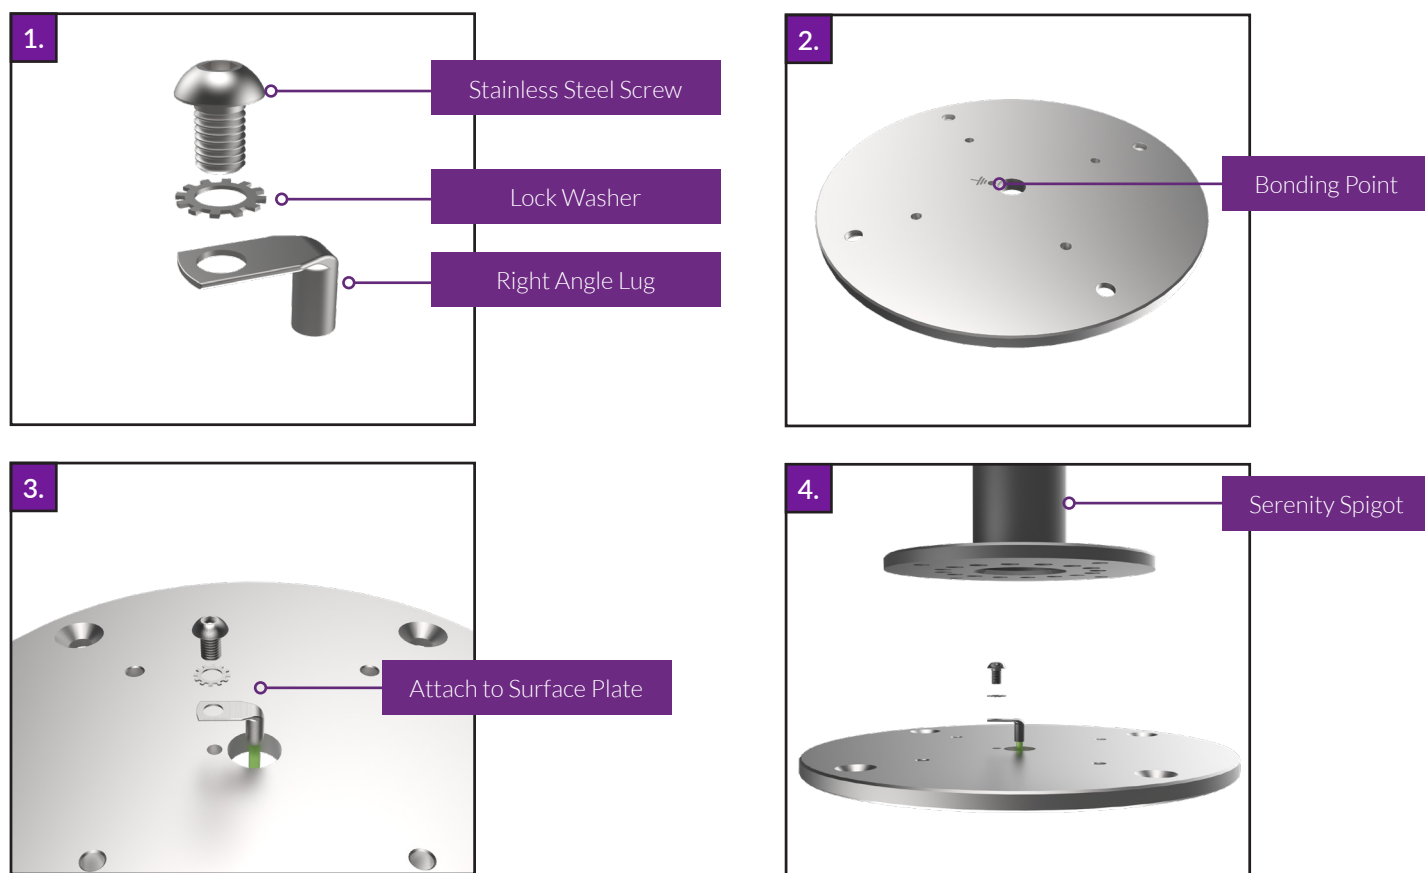

NOTICE

Equipotential Bonding Compliance Obligation

This product is subject to Equipotential Bonding compliance in accordance with the Australian/New Zealand Standards (AS/NZS 3000: 2018 Electrical Installations) otherwise known as the Wiring Rules and the USA code, NFPA 70, National Electrical Code (NEC) - 2020 edition - Article 680. If this product is installed within arms reach (NZ/AU*) or 5' (USA*) of a body of water including spa, swim spa or pool, then Equipotential Bonding MUST be performed by a licensed electrical person prior to the product being used. This is a mandatory requirement. As the purchaser of this product, you are responsible for ensuring compliance with this requirement at your own expense.

* Please verify the minimum distance required as stipulated by your specific regional regulations outside NZ/AU/USA





Option 4 - Wall Base Bracket

For installation you will require:

- 4 X M16 Bolts and Washers.
 - Hex Key Set - Included with umbrella.
 - Additional Spanner/Socket wrench required for M16 Bolts.
 - Wall Mount Bracket.
- (Follow the indications on **Figure L** to install the necessary parts)

- Step 1** Choose your site carefully.
- Step 2** Please ensure the wall you're mounting to is sound, strong and appropriate - seek appropriate advice if you have any reservations.
- Step 3** Affix the Spigot to the Wall Mount using the supplied bolts.
- Step 4** Position the Wall Mount against the wall but on the ground so that the weight of your umbrella is partially supported by the ground. Ensure a stable and solid support is provided by the ground - See **Figure L**.
- Step 5** Mark hole locations on the wall and drill pilot holes
- Step 6** Drill holes ensuring that they are parallel to each other and secure the Wall Mount bracket to the wall.

Figure L - Wall Mount

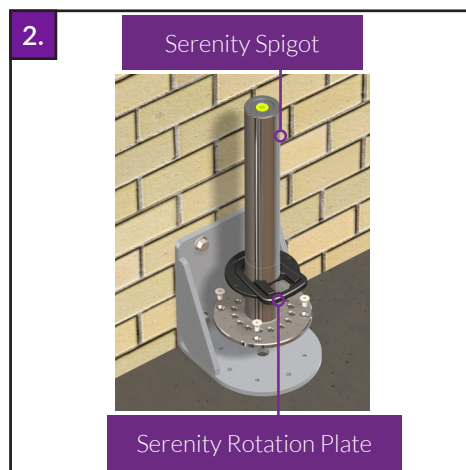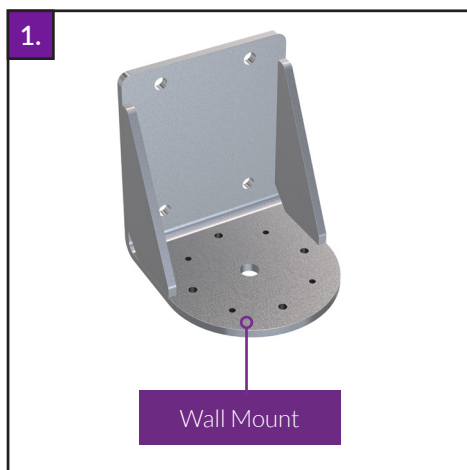


NOTE: Refer to Spigot orientation diagram - **Page 10**






Mounting Option - Spec-Sheets & Sizes

In Ground Anchor - Spec Sizing

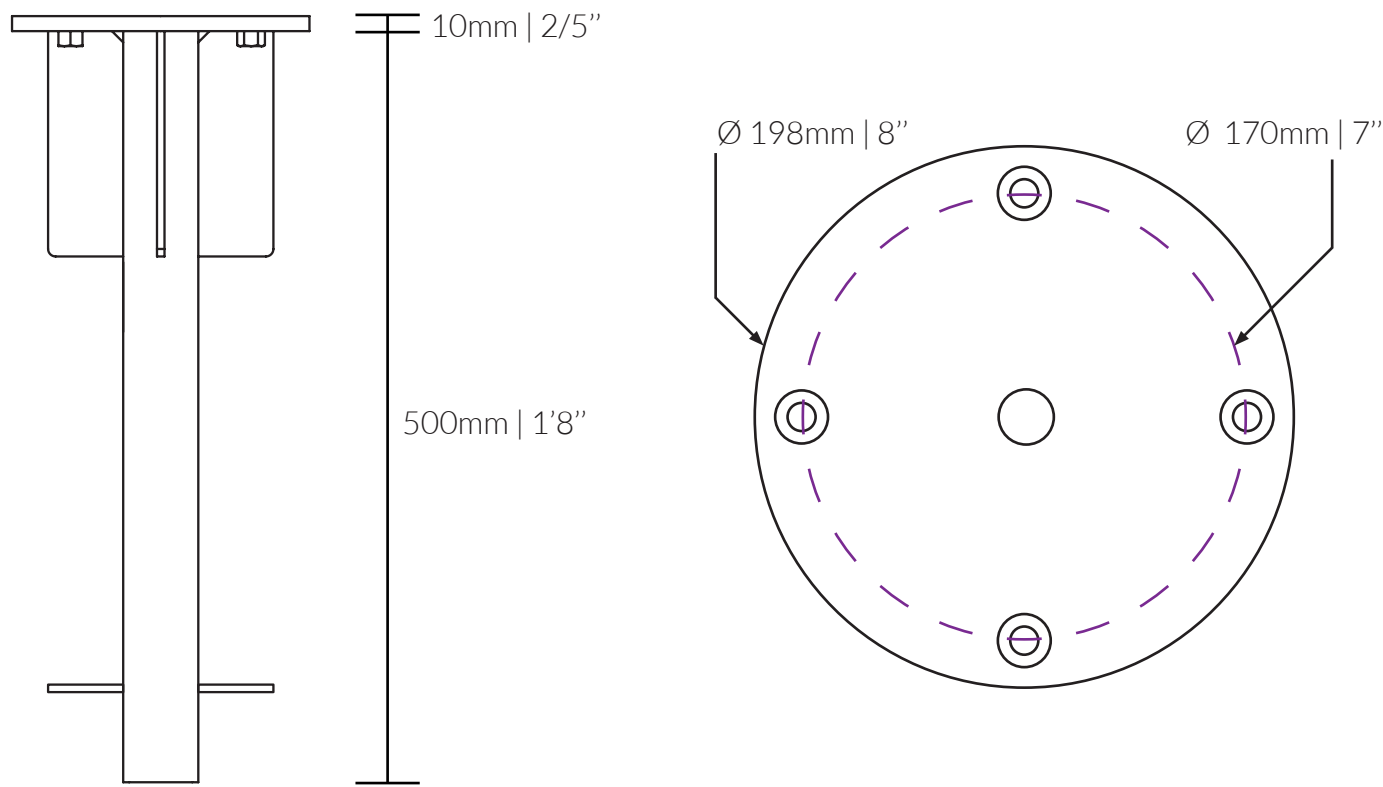

Free-standing Base - Spec Sizes

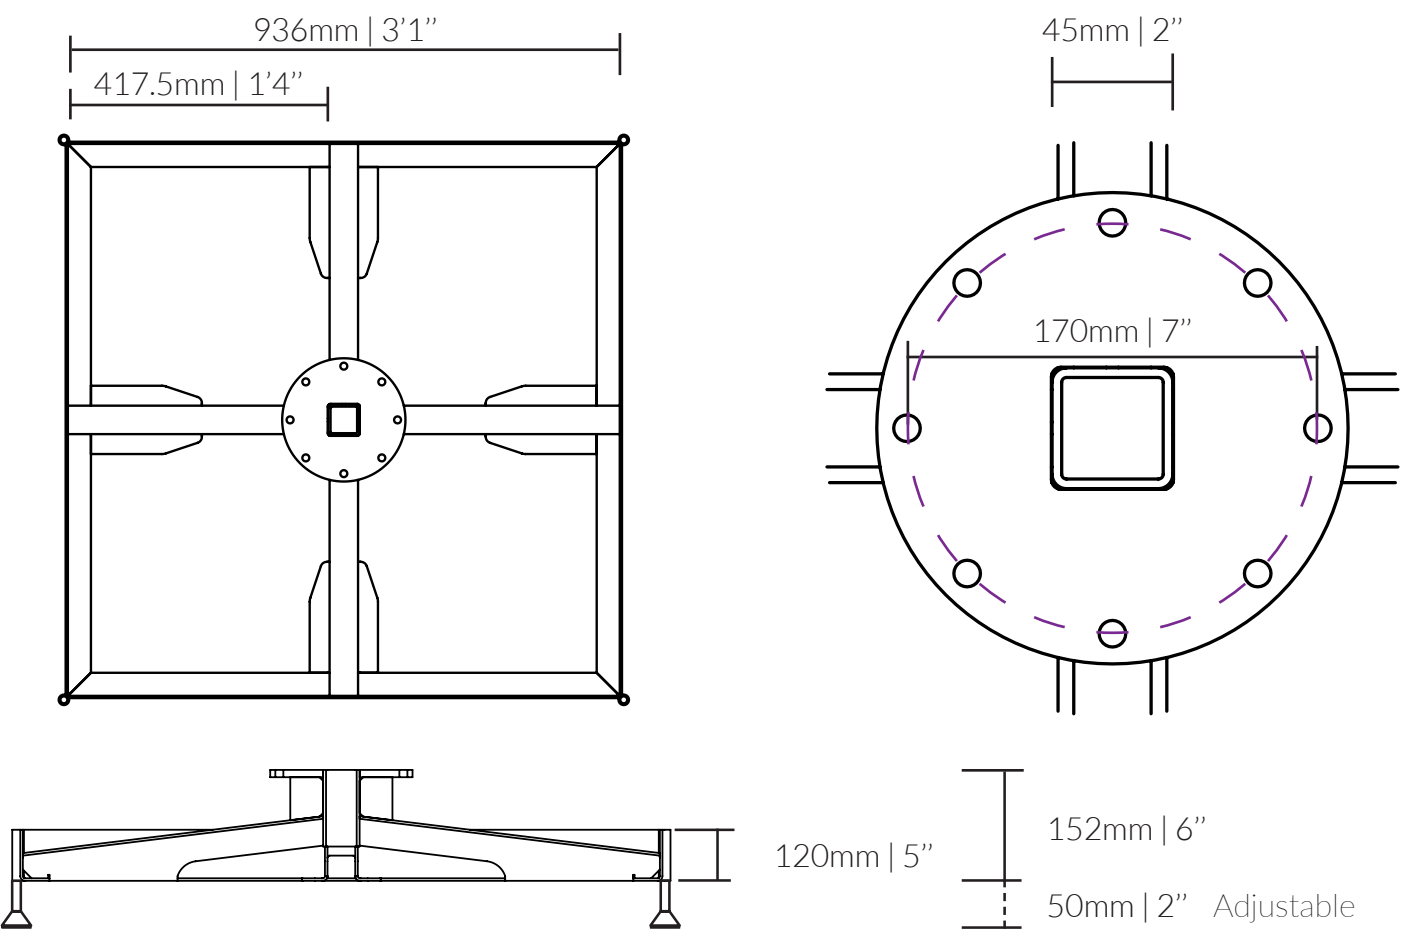

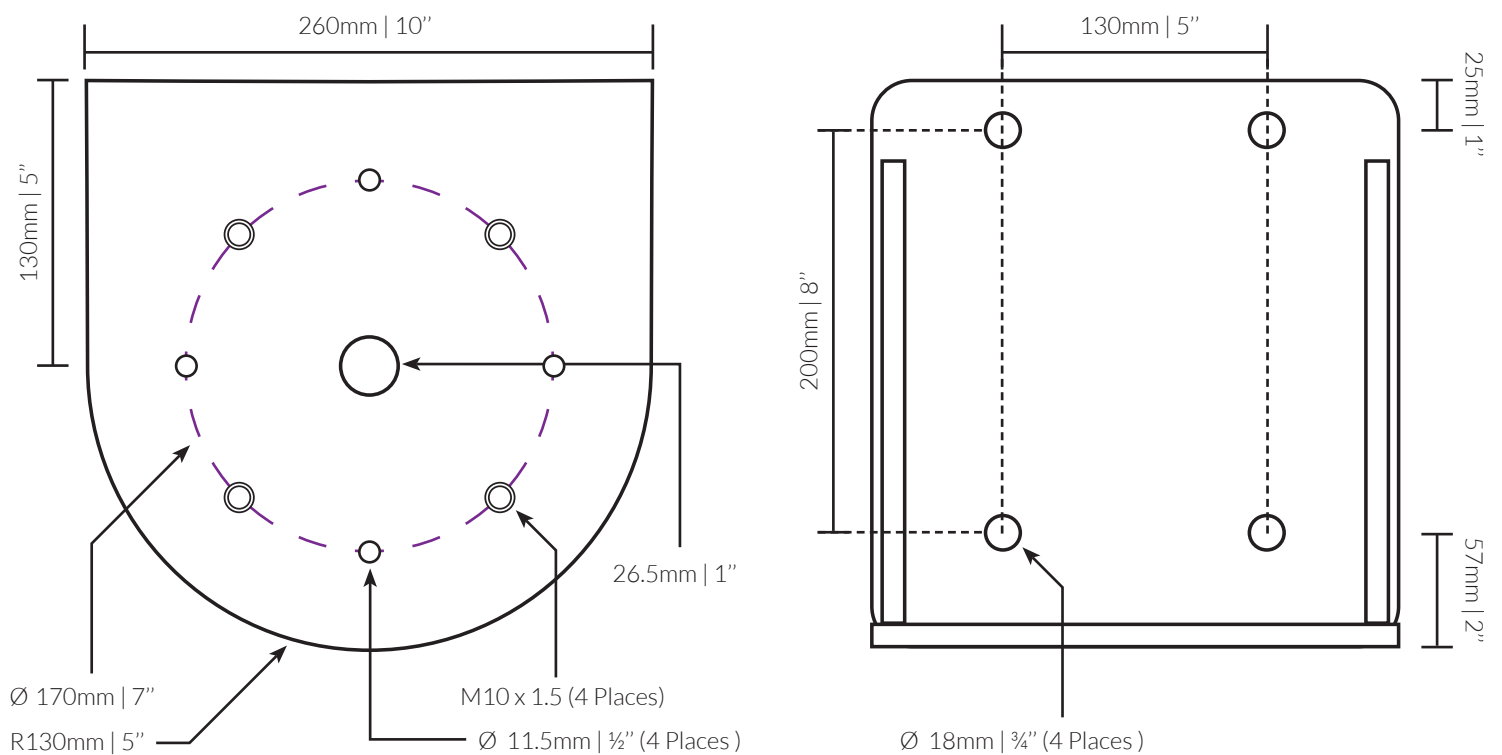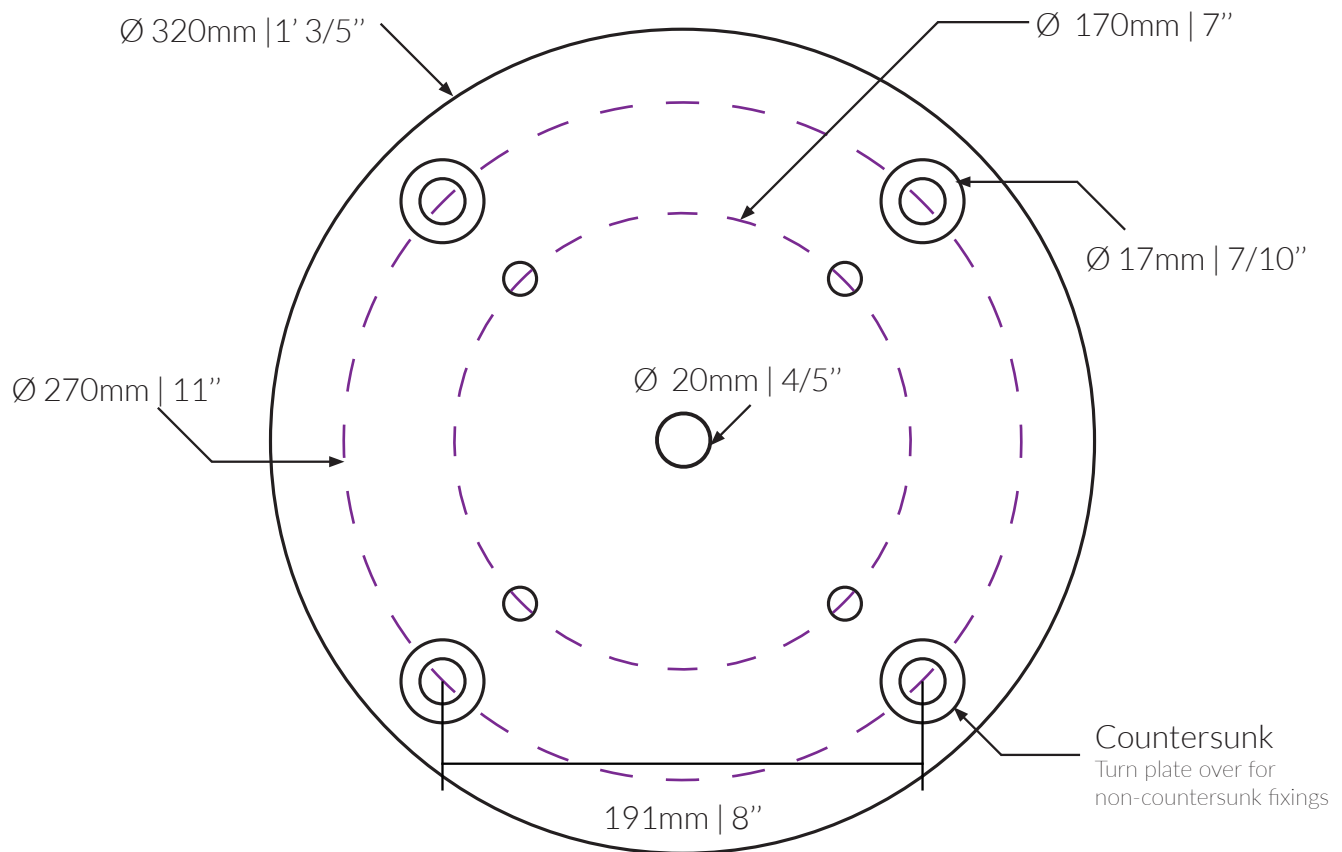

Stage 3 - Assembling your Shadowspec Serenity™

ASSEMBLING YOUR UMBRELLA

The Shadowspec Serenity comes assembled which is great! Remove the Serenity Umbrella from your box packaging and make sure you place it somewhere where the surface of your umbrella parts won't get scuffed or scratched.

You will require:

- A two person team
- Step ladder
- Hex Key Set - included with the umbrella
- Your umbrella Frame
- Your umbrella Fabric Canopy

NOTE: Remember to install the Spigot on your chosen mounting option before proceeding.

- Step 1** With the help of an assistant stand the Serenity Umbrella Up.
- Step 2** Together now, lift the Serenity Umbrella up and manoeuvre it over the Spigot so the Mast lines up with the top of the spigot.
- Tip:** We've supplied you with a small pot of grease to apply to the spigot.
- Step 3** Lower the Mast down onto the Spigot and push it into the Rotation Plate.
- Step 4** Lift the Rotation Lock Lever and tighten the security screw all the way. You now should not be able to lift your umbrella off the Spigot. Ensure the Mast can still rotate once the screw is tight. If not, loosen it.
- Tip:** Rotate the Mast until the index pin locates into the desired position hole. The lever will fall down into place - DO NOT force the lever down.
- Step 5** Slowly lift the Shadowglide Carriage up until it clicks into the open position. Please take care to ensure the ribs clear all objects and persons.

FABRIC CANOPY INSTALLATION:

- Step 1** Click the Shadowglide Button to release the Frame and lower it to the middle of the Mast to make it easier to attach the Fabric Canopy
- Step 2** Using a step ladder, with care, place the Fabric Canopy onto the Frame.
- Tip:** Reposition the bottom velcro strip if needed to ensure it is symmetrical with the Through Spar
- Step 3** Align the eyelets on the Fabric Canopy with it's correct Rib Tip and using your Hex Key, fix the Fabric Canopy in place.
- Note:** Ensure they're tight so they do not come loose overtime.
- Step 4** Align the split in the canopy with the Through Spar and apply the Fabric Canopy velcro to the Through Spar, securing the canopy.
- Step 5** Align the Fabric Canopy eyelets at the base of the Through spar and secure the final screw to the Securing Point using your Hex Key.
- Step 6** Lift the Shadowglide Carriage to the top, with care, to test the tension of the Fabric Canopy. *See Figure N* for tension adjustability options for the Fabric Canopy.



Figure M - Carriage and Rotation Lock Lever Assembly


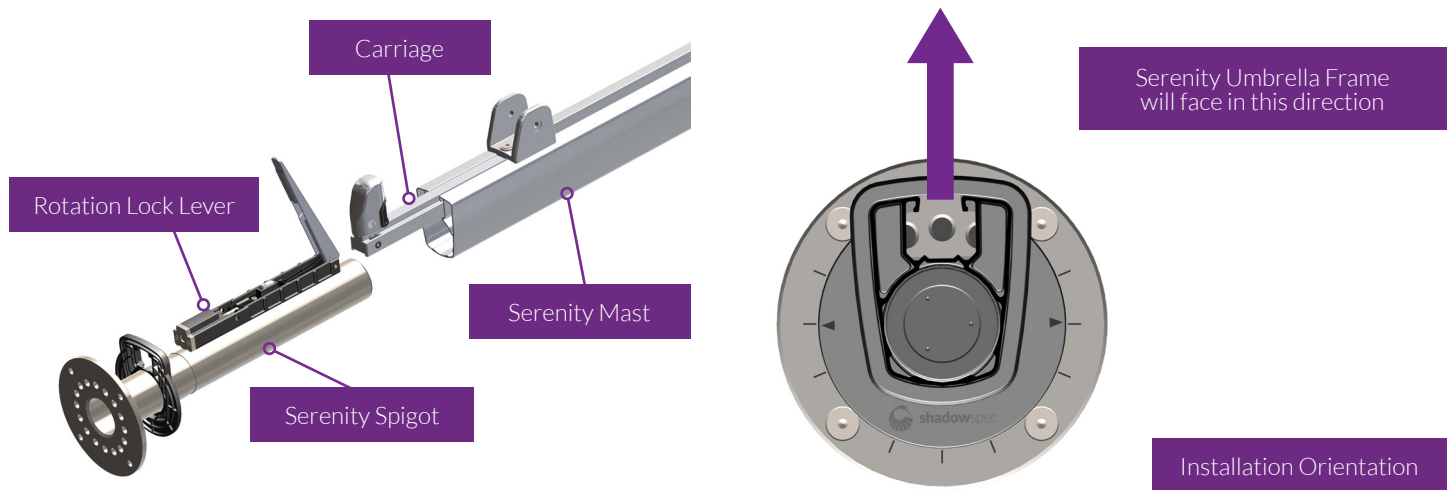


Figure N - Top Catch Permanent Operational Position

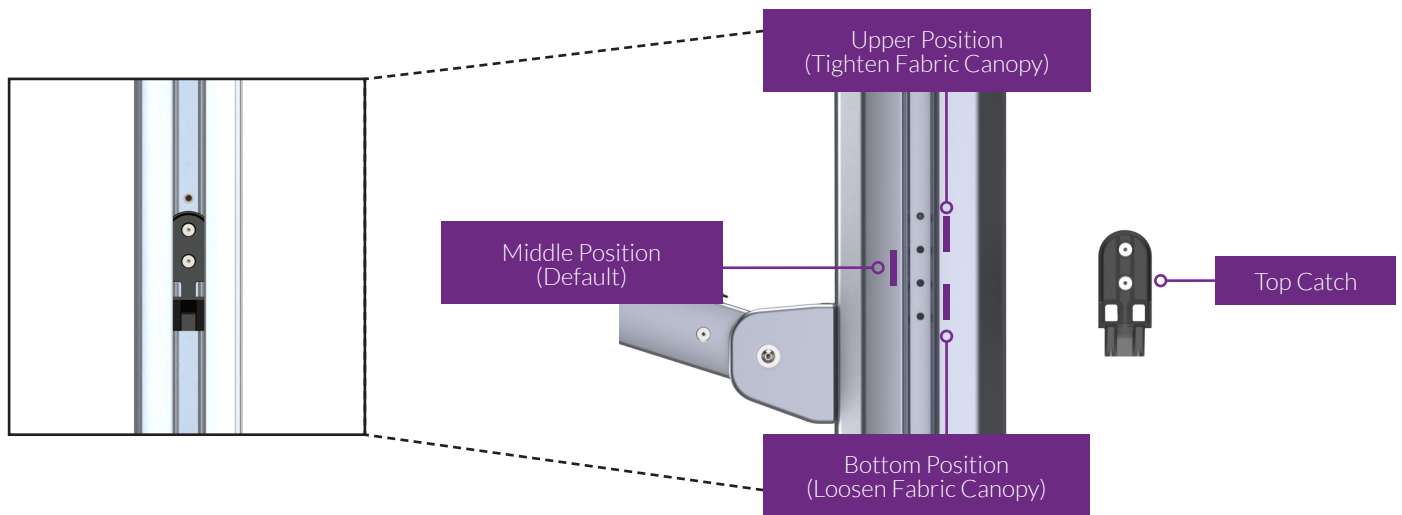

Note: The Top Catch can be moved to adjust the tightness of your canopy. The Middle position is the factory default position, the Upper Position will tighten the canopy and the Bottom position will loosen the Fabric Canopy.

Tip: Fabrics are malleable and stretch over their life time, you may find that down the line, you may need to adjust your top catch to maintain taughtness

Figure O - Fabric Canopy Installation - Before and After



Stage 4 - Operating your Shadowspec Serenity™

Your Shadowspec Serenity is engineered to be easy to use. Squeeze the Shadowglide Button to release the Carriage from its closed position and push it up the Mast until it locks in place. *Contact us if you would like to purchase a Protection Cover.*

Umbrella Deployment

- Step 1** Remove the provided Canopy Strap. *Store it somewhere you will remember.*
- Step 2** Locate the Shadowglide handle and the Lower Hub with LED light.
- Step 3** With one hand, push the Shadowhub towards the mast.
- Step 4** With your spare hand, depress the Shadowglide Button. This will unlatch the mechanism to allow deployment.
- Step 5** With care, push the Shadowglide up the mast. Remove your other hand from the hub.
- Step 6** As the Shadowglide moves up the Mast, release the Button and continue pushing the Shadowglide upward with the palm of your hand until it clicks into the Top Catch.
 - Tip:** Take note to do this action in one fluid motion for the easiest lift.
- Step 6** Your Shadowspec Serenity or Unity is ready to enjoy.


When you're done enjoying the shade or the weather has begun to turn, retracting your Shadowspec Serenity or Unity Umbrella is quick and easy.

Umbrella Retraction

- Step 1** When you're done enjoying the shade or the weather has begun to turn, retracting your Shadowspec Serenity or Unity Umbrella is quick and easy. This will release a small amount of tension from the Top Catch.
- Step 2** Wrap your hand around the handle and depress the button.
- Step 3** Move the Shadowglide down the mast to begin the process. You can now release the button.
 - Tip:** Watch your head as the canopy comes down and be cautious of the pinch zone.
- Step 6** As the hub moves in towards the mast, place your spare hand on the far side of the hub.
 - Tip:** Apply some inward pressure on the hub, this will assist in the retraction.
- Step 7** As the Shadowglide arrives at the bottom catch, you'll hear a satisfying click. This indicates the umbrella is now closed.
- Step 8** Check the canopy isn't pinched.
 - Tip:** When closed, make sure the fabric canopy is not trapped between the frame. Fold any loose material and secure it with the canopy strap to prevent rubbing.
- Step 9** Secure the frame with the provided canopy strap.
- Step 10** If you've purchased the optional protection cover, you can apply it now.



Figure P - Operating Your Umbrella

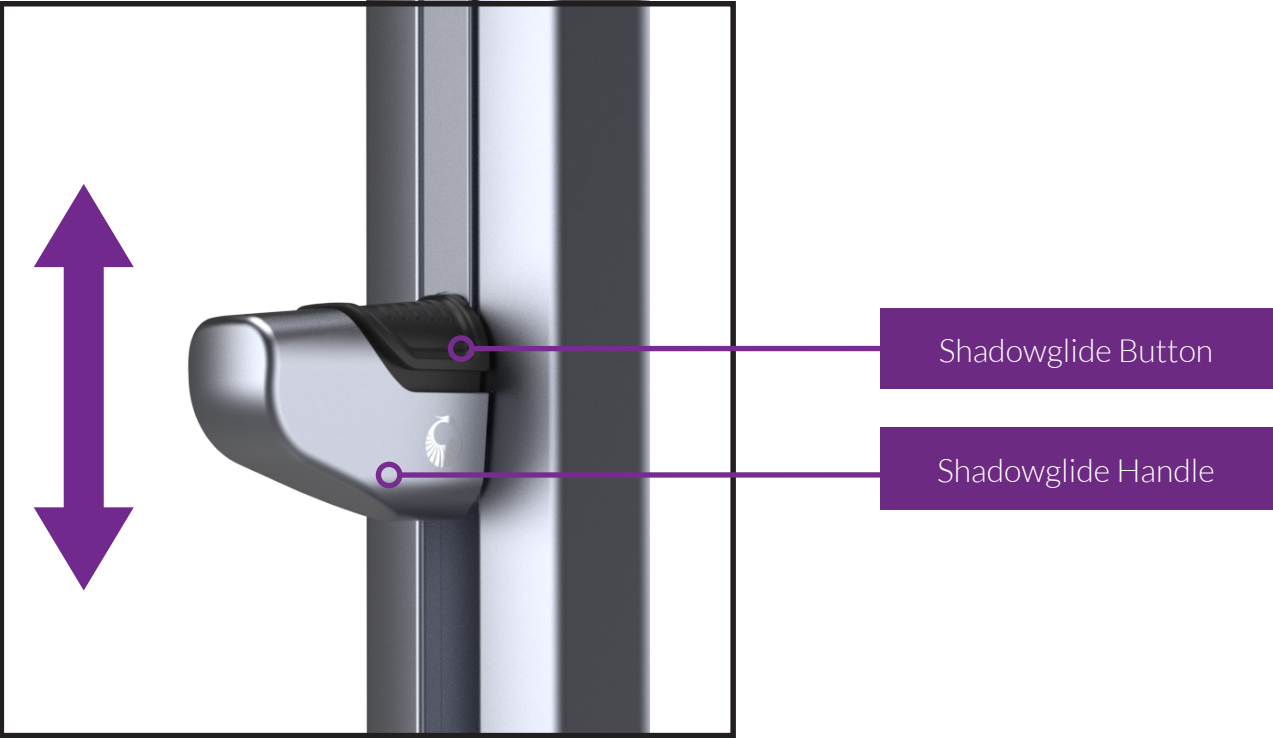

LED LIGHTS

All Shadowspec Serenity Umbrellas are supplied with an LED Light built into the into the lower hub of each Frame - See [Figure Q](#).

You've got two options to power your LED light. The LED Light can be powered by the optional Shadowspec Smart Battery. This battery makes for easy installation, without the need for electrical wiring to be installed in your umbrella. The Smart Controller allows the user to control the LED Light via Android or iOS using the Shadowspec App.

The Hard-Wire kit enables a permanent hard wired DC feed for your LED Light. This installation will require the assistance of a qualified electrician.

Contact our Shade team or order your LED Power Solution - we will help you decide which is best for you.

[Figure Q](#) - LED Light Specifications



*Input voltage: 9V
Power consumption: 900mW
2.1mm DC Connector (Tip + / Ring -)
Colour: Cold White - 6500K*

Smart Controller



Hard-Wire Kit



For Smart Battery LED Light installation visit:
www.shadowspec.com/smart-battery

For Hardwire LED Light installation visit:
www.shadowspec.com/hardwire-kit

[illegible]



shadowspec

umbrellas with distinction

**Contact our in-house shade and outdoor specialists
for more information and advice.**

AUSTRALIA

Australian Nest

Laverton North, Victoria

1800 144 155

www.shadowspec.com.au

NEW ZEALAND

Heron Base

Whangarei, Northland

0800 144 155

www.shadowspec.co.nz

UNITED STATES

North American Nest

Houston, Texas

844 888 5577

www.shadowspec.com